

# **LANCSR9000**

## **Installation Instructions**

**Tool to Easily Unplug the Cylinder on John Deere® Dual Range Conventional Combines**

# **LANKOTA®**

**270 West Park Avenue**




**Huron, SD 57350**

**866-526-5682**

## Numerical Parts List

<b><i>Part Numbers</i></b>	<b><i>Description</i></b>	<b><i>Quantity</i></b>
LANCSR9000-0000	Cylinder Reversal Tool for Conventional Combines	1
LANFSR10-011	Lockout Tags	1
LAN44302	Red Zip Ties	1

## Pictorial Parts List

 <p>LANCSR9000-0000 (1)</p>	 <p>LAN44302 (1)</p>	 <p>LANFSR10-011 (1)</p>
--	--	--

# 1. Installation

*Caution: Before using slug removal tool, shut off combine, remove key and install warning device (supplied in kit) in operators' station to avoid starting of machine while tool is in use.*

- 1.1 Open concave completely. Raise feeder house to full up position. Shut off engine and remove key. Install feeder house cylinder safety stop.
- 1.2 Open rock trap door and remove as much material as possible.
- 1.3 Return feeder house safety stop to up position. Lower feeder house to ground. Shut off engine and remove key.
- 1.4 Remove panel on top of feeder house just in front of cylinder. Remove as much material as possible.
- 1.5 Remove right hand shield covering cylinder drive pulley.
- 1.6 Install Wrench (**LANCSR9000-0000**) into pulley. Rock cylinder back and forth until material is clear.
- 1.7 Remove wrench. Reinstall shield. Reinstall top cylinder cover. Close rock trap. Return concave to previous operating setting.

For further technical information, contact Lankota Inc. at 1-866-526-5682