

# LANPSP820K & 820EK

## Installation Instructions

John Deere C-Series Corn Head Poly Snout Protectors

**20" & 22" Row Spacing ONLY**

# LANKOTA®

**270 West Park Avenue**

**Huron, SD 57350**

**866-526-5682**


# Parts List (820K)

Part Numbers	Description	Quantity
<b>LANPSP820K</b>	<b>C Series (20 &amp; 22") Poly Snout Protector</b>	<b>1 / Row Unit</b>
LANPSP804L	Poly Snout Protector – Left Side	1
LANPSP804R	Poly Snout Protector – Right Side	1
LANPSP603	Steel Shim Plate	4
LANFH7HH	1/4" x 1.75" SS BHCS	13
<b>LANPSP600BH</b>	<b>Bag of Hardware</b>	<b>1</b>
	1/4" x 1.25" SS BHCS	13
	1/4" Washer	13
	1/4" Nyloc Nut	13
	#14 x 3/4" SS Screw	19



# Parts List (820EK)

Part Numbers	Description	Quantity
<b>LANPSP820EK</b>	<b>C Series (20 &amp; 22") Poly Snout Protector</b>	<b>1 / Header</b>
LANPSP805L	Poly Snout Protector – Left Side END	1
LANPSP805R	Poly Snout Protector – Right Side END	1
LANPSP603	Steel Shim Plate	4
LANFH7HH	1/4" x 1.75" SS BHCS	13
<b>LANPSP600BH</b>	<b>Bag of Hardware</b>	<b>1</b>
	1/4" x 1.25" SS BHCS	13
	1/4" Washer	13
	1/4" Nyloc Nut	13
	#14 x 3/4" SS Screw	19

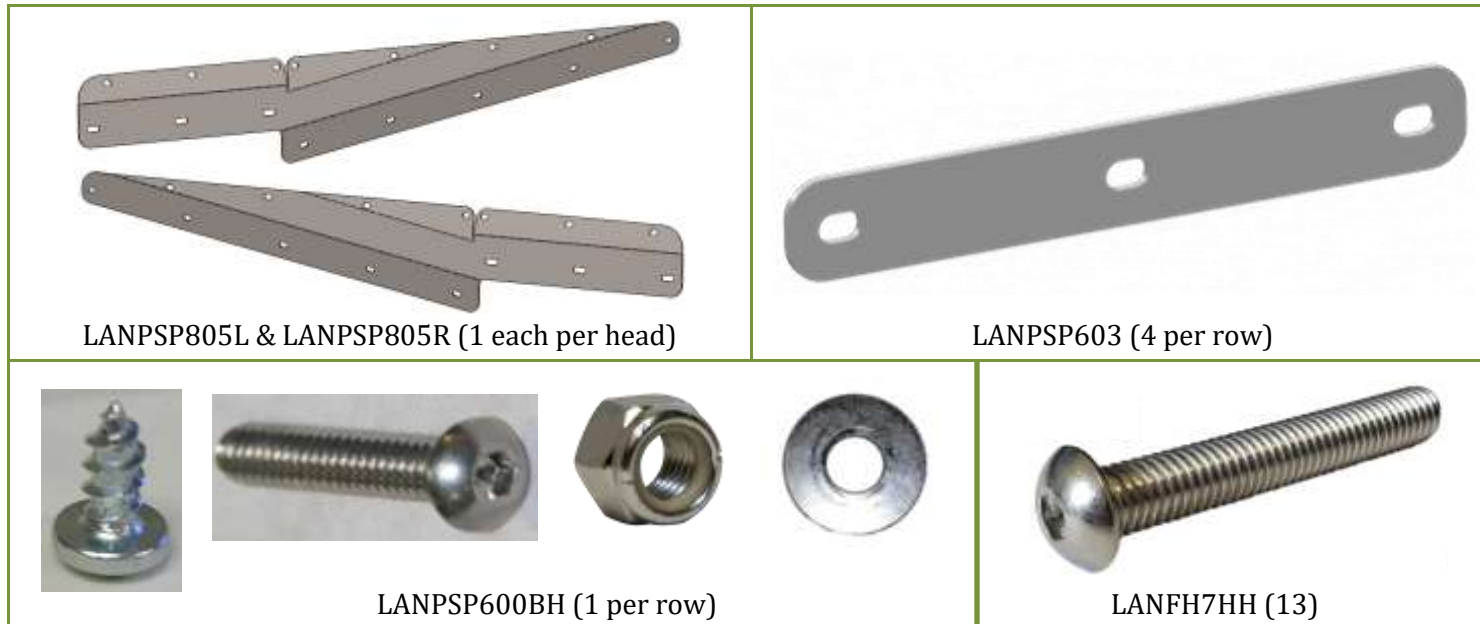

# Installation

1. Remove all black plastic wear plates from all snouts.
2. Install a snout protector (LANPSP804R) and two shims (LANPSP803) to the right side of each snout using (6) 1/4" x 1.25" bolts, washers & nyloc nuts and (9) #14 x 3/4" screws per side.
3. Repeat for left side of the snouts using (LANPSP804L) snout protectors.
4. Use the 805L & R pieces for the inside of the end snouts.

## Notes:

- Part numbers are etched into the protectors.
- The 1/4" x 1.25" bolts and LANPSP603 shims replace the black wear plates and hardware that are removed.
- 1/4" x 1.75" SS button head bolts (LANFH7HH) are provided if you wish to drill out all the holes and fasten with nuts on the inside.

For further technical information, contact

Lankota Inc. at: 1-866-526-5682

