

# LANSS21466

## Installation Instructions


Lankota Jack Stand for 600 & 700 Series John Deere Corn Heads

# LANKOTA®

270 West Park Avenue  
Huron, SD 57350  
866-526-5682

# Parts List (Numerical & Pictorial)

Part Numbers	Description	Qty
LANSS725M	Jack Stand Mount	2
LANSS725S	Jack Stand Leg	2
LANHH00233	3/4" x 4" Red Handle Hitchpin w/ hairpin	2
<b>LANSS600MBH</b>	<b>Bag of Hardware</b>	<b>2</b>
LAN600UBOLT	U-bolt 5/8" x 2.625" ID x 3.75" Length	2
LAN079UBOLT	U-bolt 5/8" x 5.125" ID x 6.50" Length	2
LAN619UBOLT	U-bolt 5/8" x 6.188" ID x 7.88" Length	2
LAN690830	5/8" Serrated Flange Nut	8

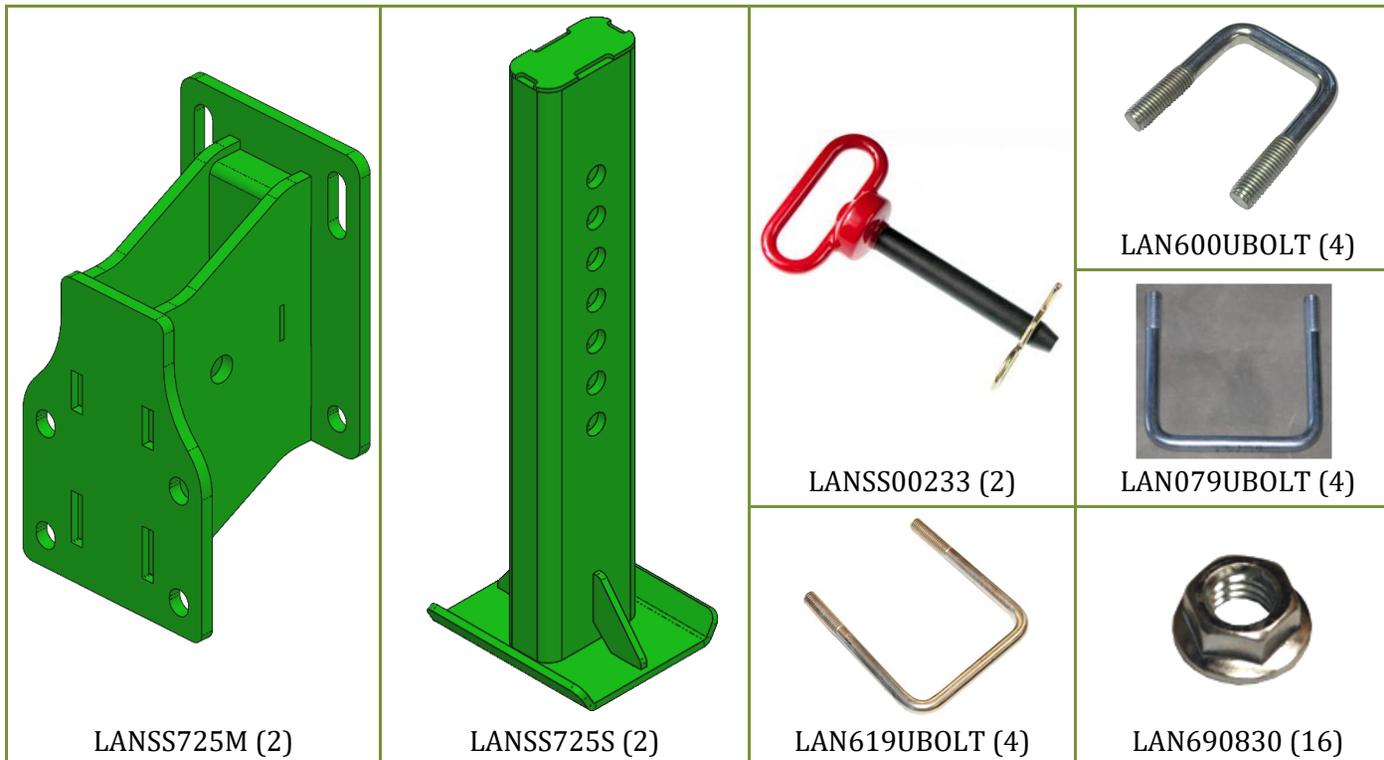

# Kit Installation

## Refer to Figures 1 & 2

1. On the outer side of the header's stock leg, hang the jack stand mount (LANSS725M) with the appropriate U-bolts from the LANSS600MBH bag of hardware.
2. Leave about 2" between the mount and the head's leg and tighten the U-bolts.



Figure 1

Figure 2

# Kit Installation

## Refer to Figures 3 & 4

3. Slide the leg (LANSS725S) into the mount and pin with the Hitchpin (LANHH00233).
4. Repeat Steps 1 through 3 on the opposite side.
5. When you set the head on the ground

**Note:** If using the Lankota Toolbar Stalk Stomper system, you can use the mount (LANSS725M) as a replacement for a LANSS615M and mount the toolbar to it with the LAN600UBOLTS in the bags of hardware.

## **CAUTION**

**DO NOT USE AS HEADER  
TRAILER LOAD POINT!**

Use standard head legs on trailers.

**For further technical assistance,**

**Call Lankota Inc. at:**

**1-866-526-5682**

Figure 3



Figure 4

