

LANJDHMA

Installation Instructions

3 Point Head Mover

LANKOTA[®]

270 West Park Avenue

Huron, SD 57350

866-526-5682

Numerical Parts List

Part Numbers	Description	Quantity
LANJDHMA	Head Mover	1
RED1000-3PT-0020Z*	Pins	2
RED21270*	Pin	1
RED21940*	Lynch Pins	3
RED21197*	3- Point Bushing	2

**included in bag of hardware.*

Pictorial Parts List

				
RED1000-3PT-0020Z(2)	RED21270 (1)	RED21940 (3)	RED21197 (2)	LANJDHMA (1)

1. Attaching Head Mover with 3-Point

Refer to Figure 1

1. Stand head mover on legs
2. Lower 3 point down and align arms with desired hole.
3. Secure with Pins (LANRED1000-3PT-0020Z) and Lynch Pins (RED21940).
4. Position and secure top link adjusting arm as needed using Pin (RED21270) and (RED21940) Lynch Pins.
5. If using a quick hitch install and pick up with quick hitch.

Note: Figure 1 is shown with Cylinder Option (LAN95270CYL)

For further technical information you may contact:

Lankota Inc.:

1-866-526-5682

Figure 1

