

LANPHM-JRB

Installation Instructions

Lankota Payloader Head Mover (JRB Quick Tach)


LANKOTA[®]

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Device Limitations

WARNING: When using the Lankota payloader head mover, **ALWAYS** keep the head mover level (0 degrees) while the payloader is in motion. **NEVER** exceed a 30 degree forward tip angle from level. Going beyond this angle can create a dangerous situation where the hooks can be overloaded and/or the header could slip off the head mover (See Figure 1). **NEVER** allow personnel underneath the header while supported by the payloader or the Lankota head mover.

Figure 1

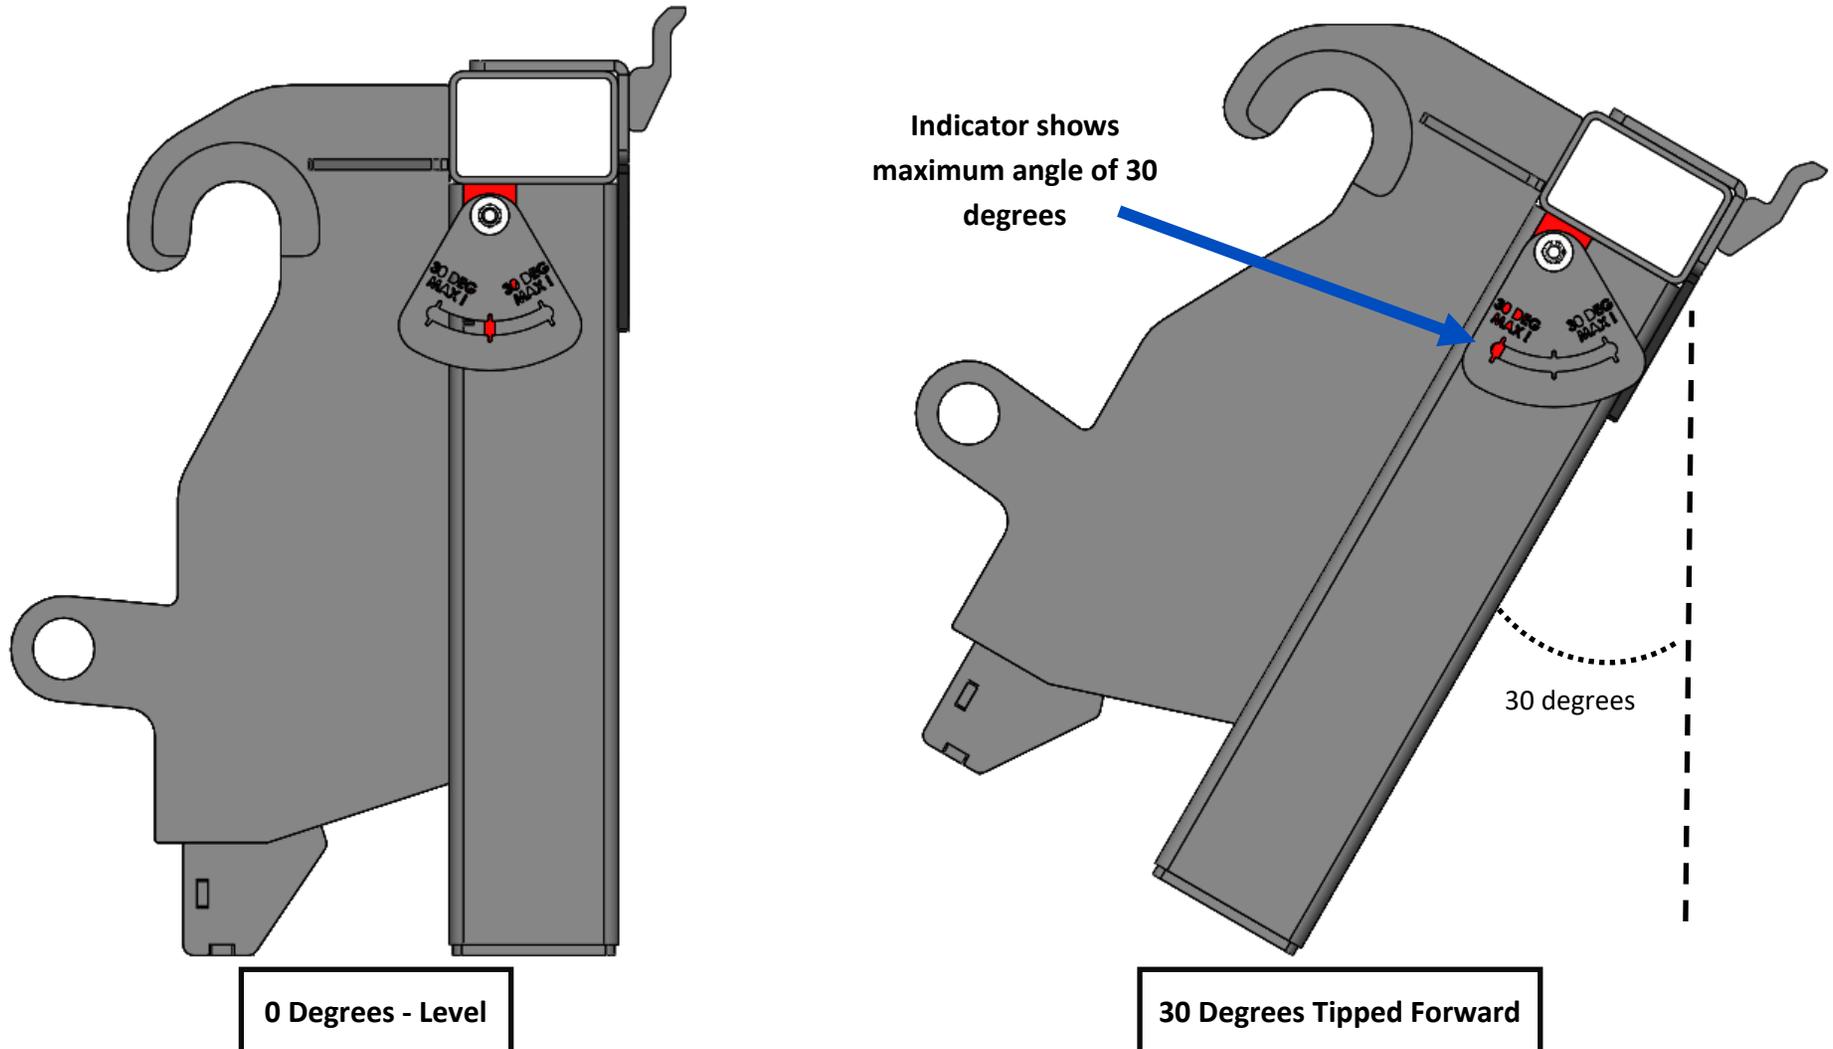

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

