LANSS6X

Installation Instructions

Lankota GENERATION II Stalk Stomper® Individual Row Flip-up Mounting Kit for JD® 600 & 700 Series Corn Heads

2-Row Coverage (1 Left & 1 Right)

270 West Park Avenue **Huron, SD 57350** 866-526-5682

Locations Where SS6X Kit Will Work

Rows

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
			1	2	3	4	5	6	7	8	9	10	11	12			
					1	2	3	4	5	6	7	8					
						1	2	3	4	5	6						

							1	2	3	4	5	6						
Head																		
2011 606-30								N	N	N	N							
2011 606-33/38									N	N								
2011 608-30						N	Υ	Υ	N	N	Υ	Υ	Ν					
2011 608-36/38						N			N	N			N					
2011 612-20				N	Υ	Υ	N	N	N	N	N	Ν	Υ	Υ	N			
2011 612-22				N				N	N	N	N				N			
2011 612-30				N	Υ	N	Υ	N	N	N	N	Υ	Ν	Υ	N			
2012 606-30								N	N	N	N							
2012 606-36/38									N	N								
2012 608-30						Ν	Υ	Υ	N	N	Υ	Υ	Ν					
2012 608-36/38						Ν			N	N			Ν					
2012 612-20				Ν	Ν			Ν	N	Ν	Z			Ν	Ν			
2012 612-22				Ν	Ν			Ν	N	Ν	Z			Z	Z			
2012 612-30				N	N	Υ	Υ	Ν	N	N	Z	Υ	Υ	Z	Z			
2012 612-36				N					N	N					N			
2013 612-38				N					N	N					N			
2012 616-30		N	N	N	Υ	Υ	Υ	Υ	N	N	Υ	Υ	Υ	Υ	N	N	N	

N

N

Ν

N

Ν

Ν

N

Ν

Green = Yes

2012 618-20

2012 618-22

Red = No

Yellow = Unknown

Gray = Not Applicable

Ν

N

Ν

Ν

Ν

Ν

Ν

N

Numerical Parts List

Part Numbers	Description	Qty
LANSS6XL	Individual Flip Up Mount (left)	1
LANSS6XR	Individual Flip Up Mount (right)	1
LANSS6XBH	LANSS6X Bag of Hardware	1
LAN079UBOLT	U-bolt 5/8"-11 x 5.125" x 6.5" Length	4
LAN619UBOLT	U-bolt 5/8"-11 x 6.188" ID (John Deere # N240607)	4
LAN690830	5/8" Serrated Flange Nut	8
LANFNHVK	1/2"-13 x 2.5" Flange Bolt	2
LANFNXC1	1/2"-13 Flanged Nyloc Nut	2
LANSS704	Solid Hitch Pin with Lynch Pin	2
LANFCJ9MC	1-3/8" Hole Saw	1

Pictorial Parts List



Preparation

- 1. Attach desired header to the combine. Lock the head to the combine.
- 2. Raise the head off the ground and lower the safety stop on the feeder house cylinder.

www.lankota.com

- 3. Set the parking brake on the combine.
- 4. Turn off the combine engine and remove the key.

OR

- 1. Set the desired header on a suitable header trailer.
- 2. Release the header from the combine and back it away.

Stalk Stomper Disclaimer

Stalk Stomper Disclaimer

The most effective use of the Lankota Stalk Stomper® is achieved by adjusting the stomper pad so that when the corn head is at its normal cutting height, the pad of the shoe is 1" above the ground. Over compression of the spring can shorten the life of the stomper spring, increase wear on the poly liner, and may result in undue damage NOT covered by Lankota's Limited Warranty.

Stalk Stomper Height Adjustment

To adjust Lankota Stalk Stomper shoes, watch this video found on YouTube: https://youtu.be/Ukcq7NrCgpQ and the Lankota website: https://lankota.com/stalk-stompers.html or scan the QR code to the right with a smart phone.

Lankota Inc.



Kit Installation



Refer to Figures 1 & 2


- 1. Install left flip-up mount (LANSS6XL) to desired row location. Attach using two U-bolts (LAN079UBOLT or LAN619UBOLT (depending on frame tube size)) and four flanged lock nuts (LAN690830). Align flip-up tube to run directly over row that Stalk Stomper® shoe is to be in contact with.
- 2. Repeat for right hand side of header.

Figure 1

Figure 2



Kit Installation

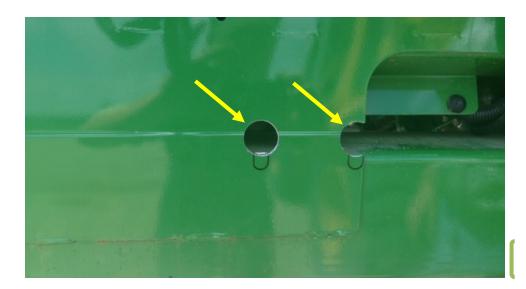

Refer to Figures 3 & 4

3. On some rows of 2012 and newer corn heads, it may be necessary to use the 1-3/8" hole saw to make a hole in the sheet metal connected to the frame tube to allow for installation of the U-bolts.

Figure 3



Figure 4

Kit Installation



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682