

LANSP402

Installation Instructions

Lankota Single Point Mounting

For All John Deere 4WD Tractors (1989-2014) plus all 9370R, 9420R & 9470R tractors

No 3-Point Arms — With or Without PTO

LANKOTA[®]

270 West Park Avenue

Huron, SD 57350

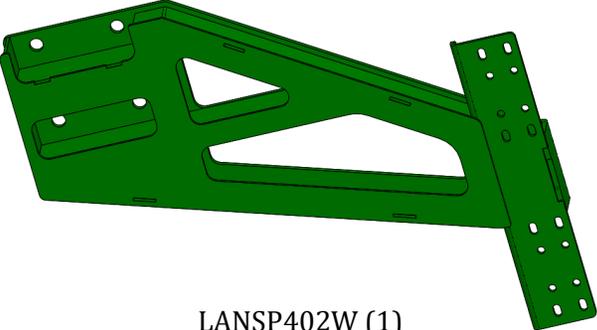
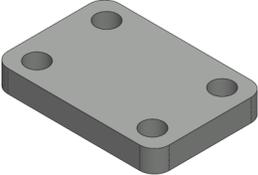
866-526-5682

Numerical Parts List

| Part Numbers | Description | Qty |
|---------------------|---|------------|
| LANSP402W | 9XX0 4WD Single Point Mount | 1 |
| LANFWS57 | 5/8" SAE Flat Washer | 4 |
| REDB707 | 5/8" x 1.75" Gr. 5 Hex Bolt | 4 |
| LAN26000 | 5/8" Flat Washer | 4 |
| REDKRJF | 5/8" Top Lock Nut | 4 |
| LANSP002 | Single Point 6-Port Block Spacer | 4 |
| LANSPUQHBH | Single Point Block Mounting Hardware | 2 |
| LANFJ9F2 | M8 x 45mm Flanged Hex Bolt | 4 |
| LANFE01V | M8 x 30mm Socket Head Screw | 4 |
| LANFQ65N | M8 Flanged Nyloc | 4 |
| LANF2CRC | 3/8" x 8" Carriage Bolt | 4 |
| LAN18000 | 3/8" Flat Washer | 4 |
| REDWL53 | 3/8" Lock Washer | 4 |
| REDNAF3 | 3/8" Hex Nut | 4 |

The 3/8" hardware will not be used in this kit.

Pictorial Parts List

| | | | | |
|--|--|--|---|---|
|  <p>LANS402W (1)</p> | |  <p>LANFWS57 (4)</p> |  <p>REDB707 (4)</p> |  <p>LAN26000 (4)</p> |
|  <p>REDKRJF (4)</p> |  <p>LANS4002 (4)</p> |  <p>LANFE01V (8)</p> |  <p>LANFQ65N (8)</p> |  <p>LANFJ9F2 (8)</p> |
|  <p>LANF2CRC (8)</p> |  <p>LAN18000 (8)</p> |  <p>REDWL53 (8)</p> |  <p>REDNAF3 (8)</p> | |

The 3/8" hardware will not be used in this kit.

Kit Installation



Refer to Figures 1 & 2

1. Clear any debris from the inside of the rear, right fender of the tractor. (It may also be necessary to remove electrical connectors.)
2. Ensure that the set of holes, shown below, are free as well.

Figure 2

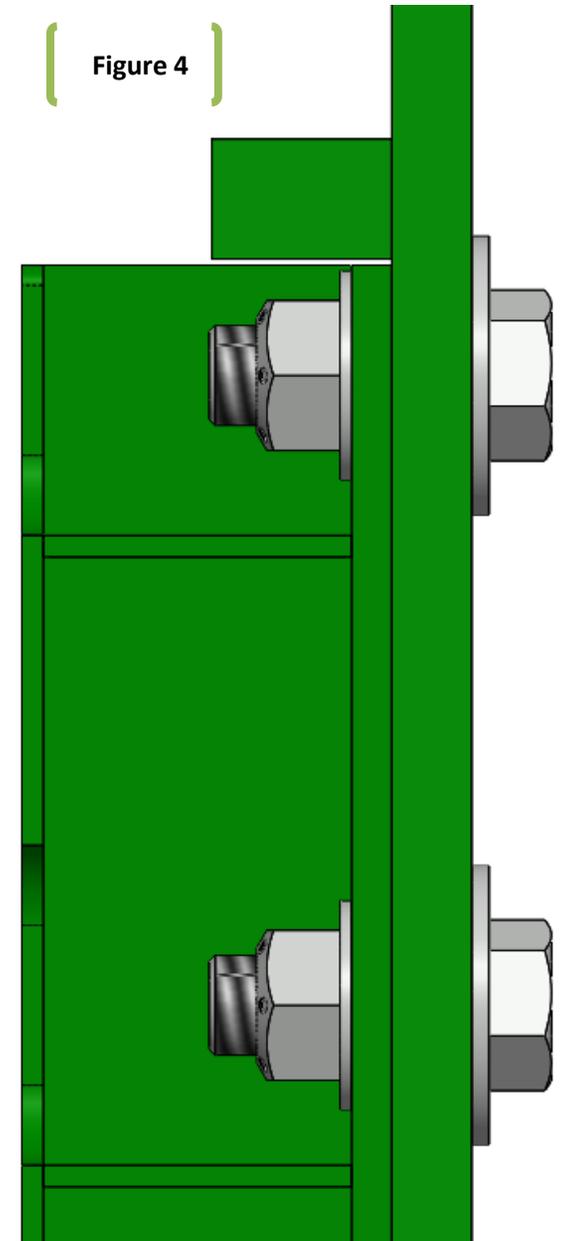


Kit Installation

Refer to Figures 3 & 4

3. Attach the mounting bracket to the tractor the (4) 5/8" bolts, SAE flat washers, standard flat washers and top lock nuts.
4. Note that the smaller (SAE) washers go inside the mount.
5. Snug the hardware, level/straighten the mount and tighten.
6. Reinstall any previously removed parts.

Follow the additional instructions provided to install blocks and route hoses/fitings correctly.





For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682