

# LAN101B

## Installation Instructions

Adapts drive shaft on newer model heads to sprocket on older model combines

**DO NOT USE with chopping corn heads or platform heads equipped with air reel systems.**


# LANKOTA®

270 West Park Avenue  
Huron, SD 57350  
866-526-5682

# Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Qty</b>
LAN101	21 Spline Sprocket Adapter	1
LAN101A	Backing Ring for 21 Spline Sprocket Adapter	1
LAN22A32	1/2" x 1.5" Gr. 5 Hex Bolt	4
LAN3722	1/2" Serrated Flange Nut	4

# Pictorial Parts List

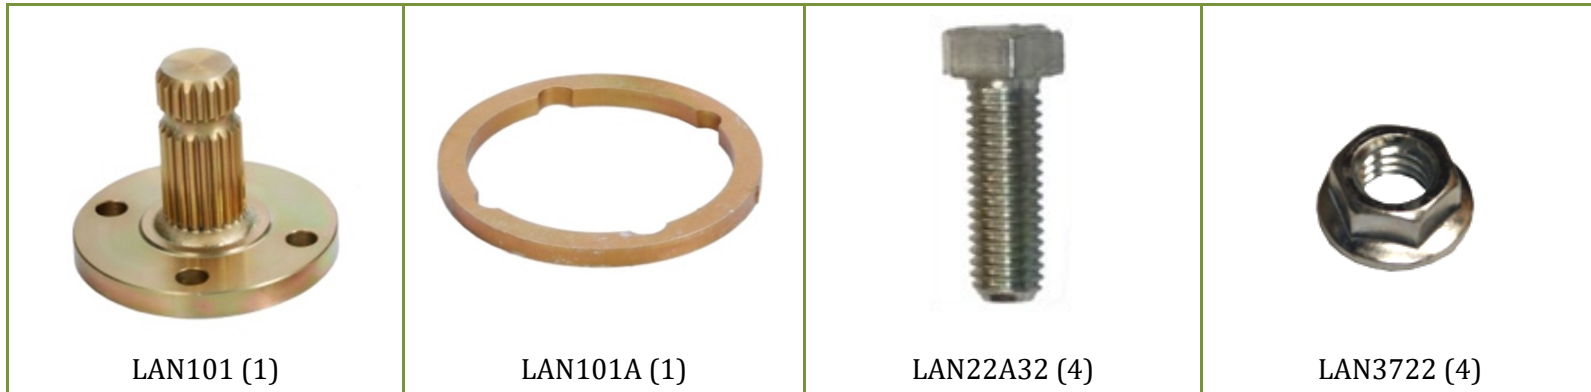

# Kit Installation

## Refer to Figures 1 & 2

1. Install 4 bolts (LAN22A32) through the holes on the adapter (LAN101A) with each bolt resting between the teeth of the feeder house drive sprocket that is held in place with the LAN101A.
2. Slide (LAN101) onto the 4 bolts and secure with flanged nuts (LAN3722).

Figure 1



Figure 2



# Kit Installation

**Refer to Figure 3**

3. Once all the bolts and nuts are installed and finger tight, tighten all the nuts using a 3/4 inch wrench.

**Figure 3**



**For further technical assistance,**

**Call Lankota Inc. at:**

**1-866-526-5682**