

# LANB300

## Installation Instructions

Adapts sprocket on older model combines to driveshaft on newer models heads


**DO NOT USE with chopping corn heads or platform heads equipped with air reel systems**

# LANKOTA®

270 West Park Avenue  
Huron, SD 57350  
866-526-5682

# Parts List

Part Numbers	Description	Qty
LAN101	Sprocket to 21-Spline Adapter	2
LAN101A	Backing Ring for 21-Spline Adapter	2
LAN22A32	1/2" x 1.5" Gr. 5 Hex Bolt	8
LAN3722	1/2" Serrated Flange Nut	8

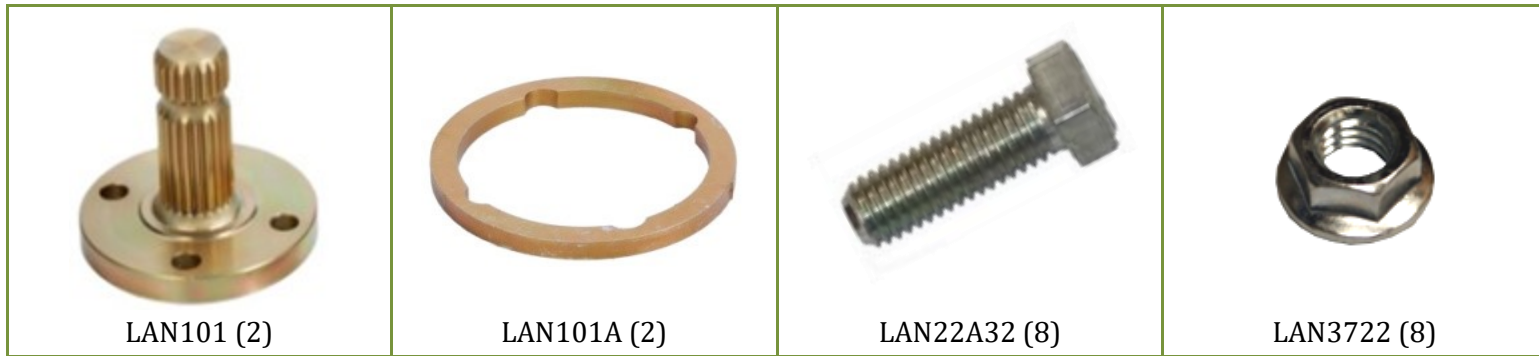

# Warranty/Coverage

**DO NOT USE with chopping corn heads or platform heads equipped with air reel systems.**

**NOT covered under warranty when used with air reels, air tubes, or chopping corn heads.**

# Kit Installation



Figure 1

## Refer to Figures 1 - 3

1. Install 4 bolts (LAN22A32) through the holes on the adapter (LAN101A) with each bolt resting between the teeth of the feeder house drive sprocket that is held in place with the LAN101A.
2. Slide (LAN101) onto the 4 bolts and secure with flanged nuts (LAN3722).
3. Once all the bolts and nuts are installed finger tight, tighten all the nuts using a 3/4" wrench.

**Repeat these steps for the other side of feeder house.**



Figure 2



Figure 3

**For further technical assistance,**

**Call Lankota Inc. at:**

**1-866-526-5682**