

# **LANBS6FD32K**

## **Installation Instructions**

**Lankota Bean Saver Brush Kit for JD® 6XX Series Flex Draper Heads**

**(6xxFD, 7xxFD & RDxxF Series)**

**Top Brush ONLY**

# **LANKOTA®**

**270 West Park Avenue**

**Huron, SD 57350**

**866-526-5682**

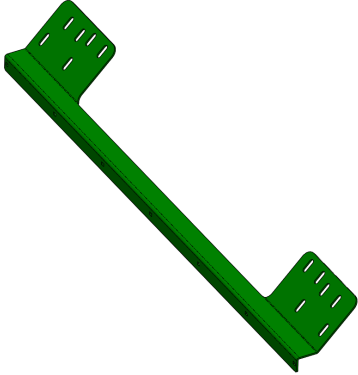

## Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Qty</b>
LANBS6FD01	Bean Saver Brush	1
LANBS6FD02-03	Brush Holder - (Long) Bottom	1
LANBS6FD02-04	Brush Holder - (Long) Top	1
LANBS6FD04	Bean Saver Brush Mount - Top	1
<b>LANBSBH</b>	<b>Bag of Hardware</b>	<b>1</b>
LANFXG26	5/16-18 x 3/4" Carriage Bolt	7
REDKRJ8	5/16-18 Top Lock Nut	7

## Preparation

1. **Attach desired header to the combine. Lock the head to the combine.**
2. **Raise the head off the ground and lower the safety stop on the feeder house cylinder.**
3. **Raise the reel all the way up.**
4. **Set the parking brake on the combine.**
5. **Turn off the combine engine and remove the key.**

# Pictorial Parts List

 <p>LANBS6FD01 (1)</p>		 <p>LANBS6FD04 (1)</p>	
 <p>LANBS6FD02-03 (1)</p>	 <p>LANBS6FD02-04 (1)</p>	 <p>LANFXG26 (7)</p>	 <p>REDKRJ8 (7)</p>

# Kit Installation

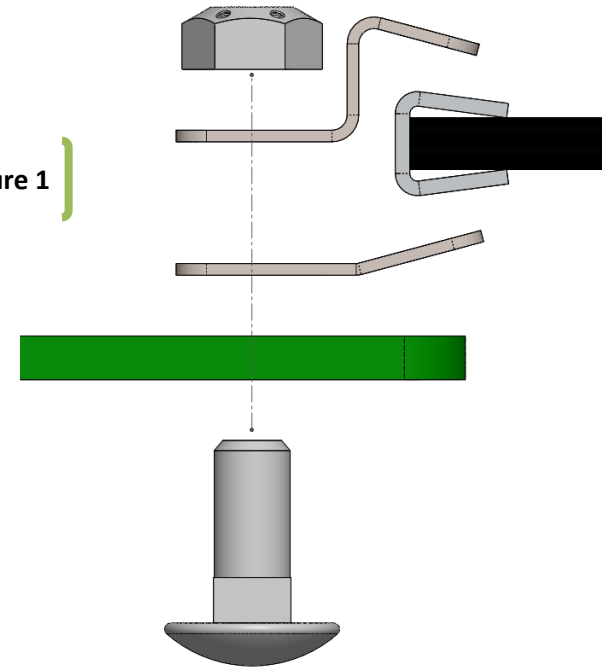
## Refer to Figures 1 & 2

1. Install the brushes on the mount; use the provided 5/16" carriage bolts and top lock nuts found in the LANBSBH bags and tighten.

Figure 2



Figure 1



# Kit Installation

## Refer to Figure 3

2. Remove the screws and washers found above the finger drum on each side as shown.

Note: 2016 & newer heads use the screws marked with **red**; 2015 & older heads use the slots marked with **blue**.

## Refer to Figure 4

3. Attach the upper brush by reusing the removed hardware.

Figure 3



Figure 4





**For further technical assistance,**

**Call Lankota Inc. at:**

**1-866-526-5682**