

LANMFKK15037

Installation Instructions

Mud Flaps for R4030, R4038 & R4044 JD Sprayers with Wide Fenders (KK15037)


(1 Pair)

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Parts List

Part Numbers	Description	Qty
LANMF15	Sprayer Mud Flap Mount	2
LANMF16	Mud Flap Clamp Plate	2
LANMF17	Sprayer Mud Flap (28x20)	2
LANMF07	Anti-Tear Out Plate	8
LANF06FP	3/8" x 1.25" Stainless Hex Bolt	2
LANF05SQ	3/8" Stainless Flat Washer	8
LANF21DD	3/8" Stainless Top Lock Nut	4
LANMFBH1	5/16" Mud Flap Bag of Hardware	3
LANF05SP	5/16" Stainless Flat Washer	10
LANFH8NC	5/16" Stainless Top Lock Nut	6
LANF06F3	5/16" x 1" Stainless Hex Bolt	6
LANMFBH2	3/8" Mud Flap Bag of Hardware	1
LANF06FW	3/8" x 3" Stainless Hex Bolt	4
LANF06FP	3/8" x 1.25" Stainless Hex Bolt	2
LANF05SQ	3/8" Stainless Flat Washer	8
LANF21DD	3/8" Stainless Top Lock Nut	4

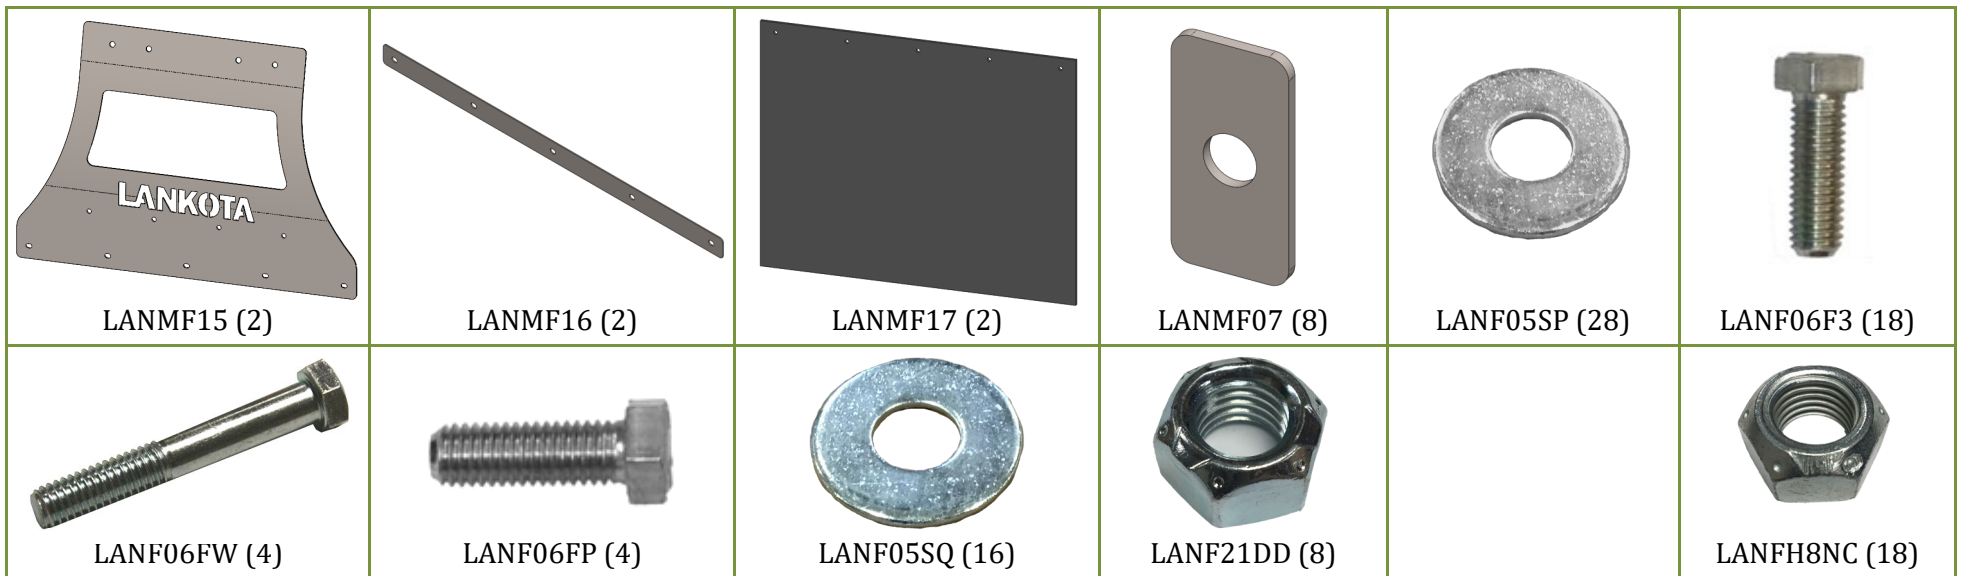

Kit Installation



Figure 1



Figure 2



Figure 3

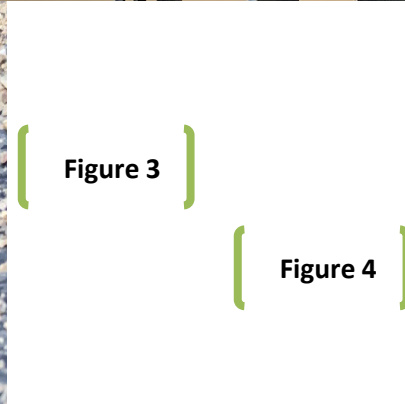


Figure 4

Refer to Figures 1 - 4

1. Remove the hardware and outer plate from the back mount point of the fender.
2. Mount the mud flap mount (LANMF15) through the fender to the fender bracket with the 3/8" hardware. Use the 3" bolts through the fender arm and the 1.25" bolts in the outer holes.
3. Mount the mud flap (LANMF17) to the mount with the 5/16" hardware and clamp plate (LANMF16).



Kit Installation



Figure 5



Figure 6

Refer to Figures 5 & 6

4. Using a 11/32" drill bit, through the shown holes, drill holes in the fender.
5. Push a 5/16" bolt and washer through the holes.
6. Secure them in place with an anti-tear out plate (LANMF07) and a 5/16" top lock nut.
7. Tighten all hardware.
8. Repeat on other wheel.



WARRANTY STATEMENT

Lankota Warranty only covers products produced by LANKOTA and does not cover parts made and/or sold by other aftermarket manufacturers, or the original manufacturer, or that were part of the original equipment's construction.