

# **LAN500**

## **Installation Instructions**

**Header Telescoping Drive Line Storage Hooks.**

# **LANKOTA<sup>®</sup>**

**270 West Park Avenue**


**Huron, SD 57350**

**877-860-7669**

## Numerical Parts List

<b><i>Part Numbers</i></b>	<b><i>Description</i></b>	<b><i>Quantity</i></b>
LAN108	PTO Support Bracket	2

## Pictorial Parts List

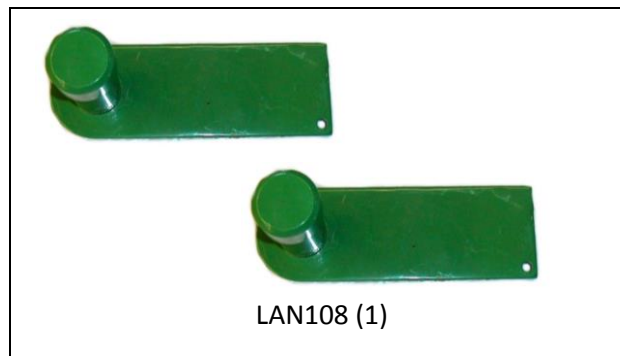

# 1. Installing PTO Support Bracket

## Refer to Figure 1.1

1. Measure 10 ½ inches down from top of header rail along the outside of vertical sub - frame. Grind off paint in this area and paint on the PTO support before spot welding PTO Support (**LAN108**) to frame. Try installing drive shaft on PTO support to ensure PTO support is properly positioned. If position is correct, finalize the welding. After weld has cooled, buff and paint to prevent rusting. Repeat on other side. (See Figure 1)

For further technical questions, contact Lankota at 866.526.5682.

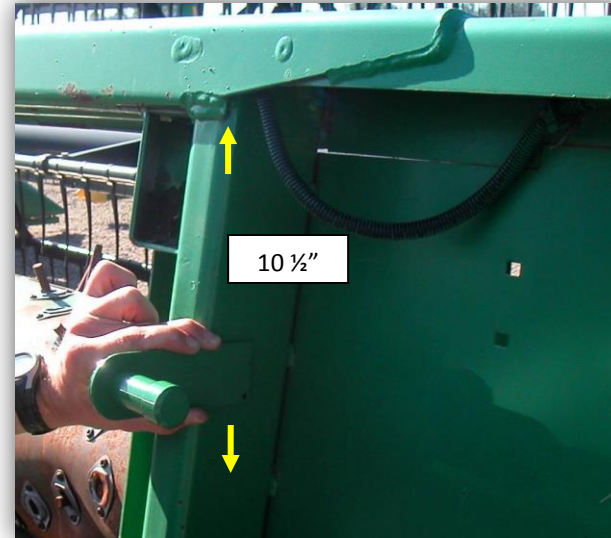


Figure 1.1