

LANTB21410BLK

Installation Instructions

Lankota Toolbox for New Holland® (160, 220, 260) CIH® (1504, 2104, 2504)

and Massey Ferguson® (MF99X0, WR197, WR235 & WR265) Windrowers

LANKOTA®

270 West Park Avenue

Huron, SD 57350

866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANTB18207BXBLK	Platform Toolbox	1
LANTB020BLK	Toolbox Mount Bracket	2
LANTB021BLK	Toolbox Mounting Strap	2
LANFWS55	1/2" SAE Washer	4
LANFB522	1/2" x 5.5" Hex Bolt	4
LAN3722	1/2" Serrated Flange Nut	4
LAN18A	3/8" x 1" Carriage Bolt	4
LAN18000	3/8" Flat Washer	4
RED0DTT	3/8" Top Lock Nut	4

				
LANTB18207BXBLK (1)	LANTB020BLK (2)	LANTB021BLK (2)	LANFWS55 (4)	LANFB522 (4)
				
LAN3722 (4)	LAN18A (4)	LAN18000 (4)	RED0DTT (4)	

Kit Installation

Refer to Figures 1 & 2

1. Pre-assemble the two mounting brackets (LANTB020BLK) to the back of the toolbox with a 3/8" x 1" carriage bolt (LAN18A), 3/8" washer (LAN18000) and 3/8" top lock nut (RED0DTT) through the top flange.
2. On frame rail of the windrower, place the two mounting straps (LANTB021BLK) on the back side of the tube with two 1/2" washers (LANFWS55) and 1/2" x 5 1/2" hex bolts (LANFB522) on each pointing outward. **Note: The toolbox may only fit on the passenger or driver side, depending on the windrower model.**
3. Place the toolbox and mount assembly over the four 1/2" x 5 1/2" bolts and secure with four 1/2" serrated flange nuts (LAN3722). **Hand tighten only at this time.**



Figure 1



Figure 2

Kit Installation

Refer to Figures 3 & 4

4. Open and close the main side access door to verify clearances. **Note: The toolbox mounting arms can be moved from side to side to line up with any of the six carriage bolt slots, but it is recommended to use the widest mounting holes as can be achieved.**
5. If everything looks okay, mark and drill through the back of the toolbox with a 7/16" bit at the lower bolt holes on the mounting arms (LANTB020BLK).
6. Bolt through both the lower square mounting bracket holes with a 3/8" x 1" carriage bolt (LAN18A), with a 3/8" washer (LAN18000) and 3/8" lock nut (RED0DTT) inside the toolbox.
7. Tighten all hardware.



Figure 3

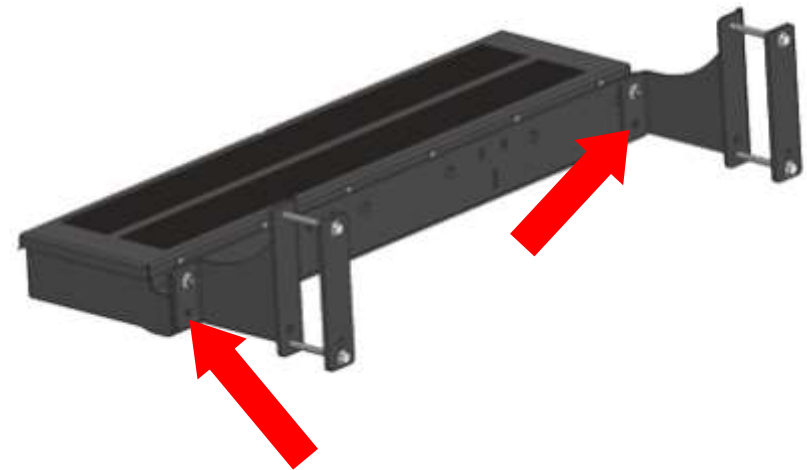


Figure 4



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682