

LANTB21437

Installation Instructions

Lankota Planter Toolbox for JD DB60 Planters (MY2021 & Older)

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Numerical Parts List

| Part Numbers | Description | Qty |
|--------------|-------------------------------------|-----|
| LANTB037 | Toolbox Upright Mount, Planter Wing | 2 |
| LANTB038 | Toolbox Mount Clamp, Planter Wing | 2 |
| LANFHFNJH | 5/8" x 9" Hex Bolt | 4 |
| LANFWS57 | 5/8" SAE Flat Washer | 4 |
| REDKRJF | 5/8" Top Lock Nut | 4 |
| LANTBJD200 | Toolbox Assembly | 1 |

Pictorial Parts List



Kit Installation

Refer to Figures 1 & 2

- When installed, the mounting bolts are 39.1" apart. On a 30" planter, this requires that one set of bolts go inline with a row unit.
 - Select where the toolbox will mount using that knowledge.
1. To install the first mount, hardware may need to be shortened/ exchanged. One of the indicated bolts must not go past the nut.

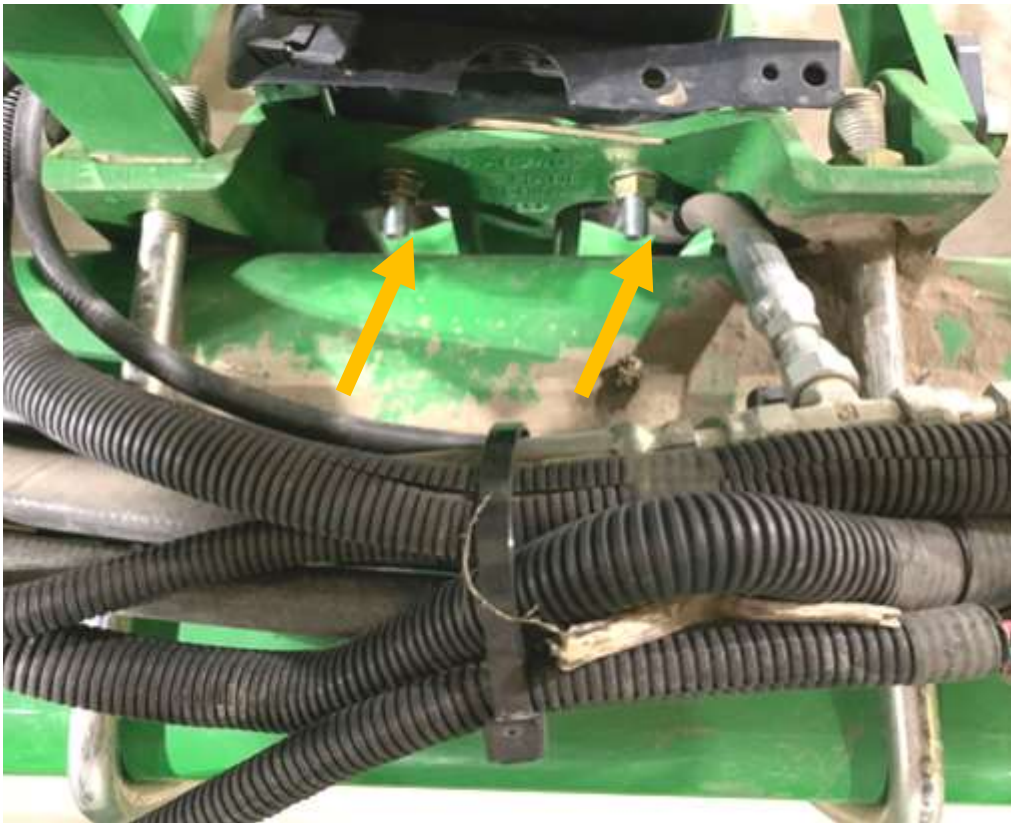


Figure 2



Figure 1

Kit Installation



Figure 3



Figure 5



Figure 4

Refer to Figures 3—5

2. Install a clamp plate (LANTB038) by the modified bolt and hang it with a 5/8" x 9" bolt (LANFHFNJH) by setting the head in the top hex cutout.
3. Slide the upright mount (LANTB037) onto the bolt and fasten with a 5/8" washer and lock nut. **Note: The toolbox sits within the uprights.**
4. Install another bolt in the bottom of the clamp plate and fasten.
5. Square the mount with the frame and tighten.

Kit Installation



Figure 6

Refer to Figures 6—8

6. Measure 39" from the first set of bolts and that is where the 2nd mount goes.
7. Repeat the previous steps, but leave the mount loose enough to slide.
8. Set the toolbox on the frame and install it with the 1/2" carriage bolts and flange nuts at your desired height.
9. When the toolbox is completely installed and 1/2" hardware tightened, go back down and tighten the 2nd mounts 5/8" bolts.

Figure 7



Figure 8





**For further technical assistance,
Call Lankota Inc. at:
1-866-526-5682**

