LANBS62976

Installation Instructions

Lankota Bean Saver Bottom Brush Kit for JD® HD & HDF Header

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.

Numerical Parts List

Part Numbers	Description	Qty
LANBS629A	JD HD Bottom Brush Mount	1
LANBS629B	JD HD Bottom Brush Mount with Shark Fin	1
LANBS6FD35	Bean Saver Brush—35”	2
LANBS6FD36	Brush Holder - Top	2
LANBS6FD37	Brush Holder - Backing	2
LANFH2CHJ	M8 x 25mm Button Head Torx Screw	6
LAN1133	Flat Washer	6
LANBSBH	**Bag of Hardware**	**2**
LANFXG26	5/16” x 3/4” Carriage Bolt	14
REDKRJ8	5/16” Top Lock Nut	14
LAN1331SFW	Shark Fin	1
RED305K	3/8” x 1 1/4” Carriage Bolt	2
LANFWS53	SAE 3/8” Flat Washer	2
LAN1618000	Nyloc nut—3/8”-16, Gr.5	2

Preparation

1. **Lower the reel and move forward as far as possible.**
2. **Set the header on the ground or a header trailer.**
3. **Unhook the head from the combine and back it away.**

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.

Pictorial Parts List

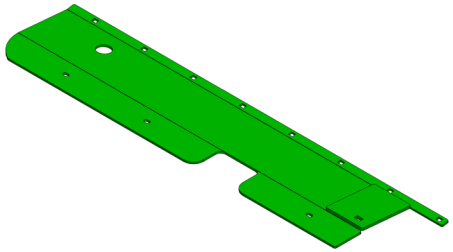 LANBS629A (1)	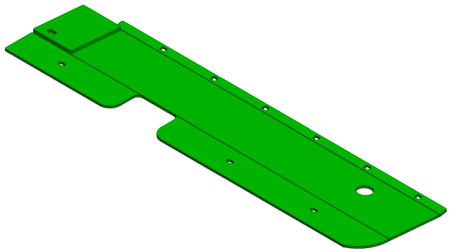 LANBS629B (1)	LANBS6FD35 (2)	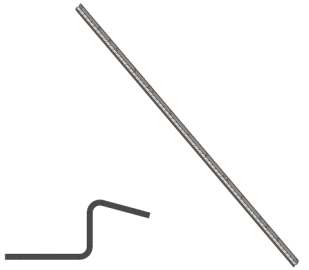 LANBS6FD36 (2)
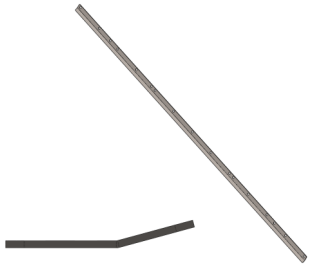 LANBS6FD37 (2)	LANFH2CHJ (6)	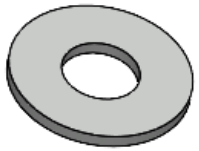 LAN1133 (6)	LANFXG26 (14)
REDKRJ8 (14)	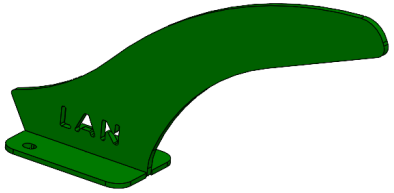 LAN1331SFW (1)	RED305K (2)	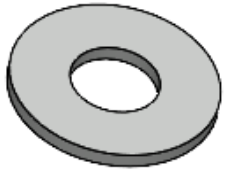 LANFWS53 (2)
	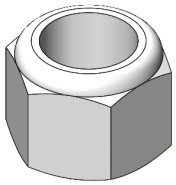 LAN1618000 (2)		

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.

Kit Installation

Refer to Figures 1—4

1. Take 5/16” carriage bolts and top lock nuts (LANFXG26 & REDKRJ8) and bolt brush (LANBS6FD35) and holders (LANBS6FD36 & LANBS6FD37) to JD HD Bottom Brush Mounts.
2. Remove factory shark fin & 6 Button head Torx bolts referenced in Figure 4 & 5.
3. Install Shark Fin (LAN1331SFW) using 3/8” x 1 1/4” carriage bolt (RED305K), SAE 3/8” flat washer (LANFWS53) & 3/8” nyloc nut (LAN1618000).

Figure 1

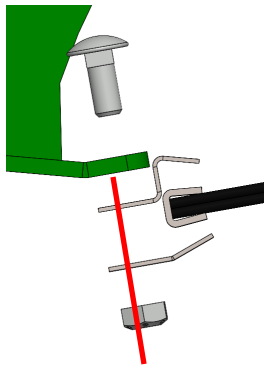

Figure 2

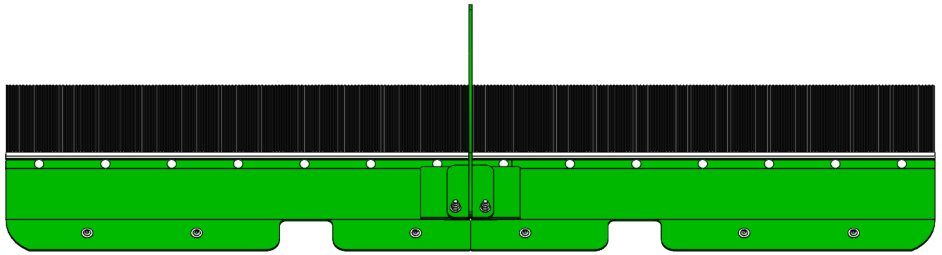

Figure 3

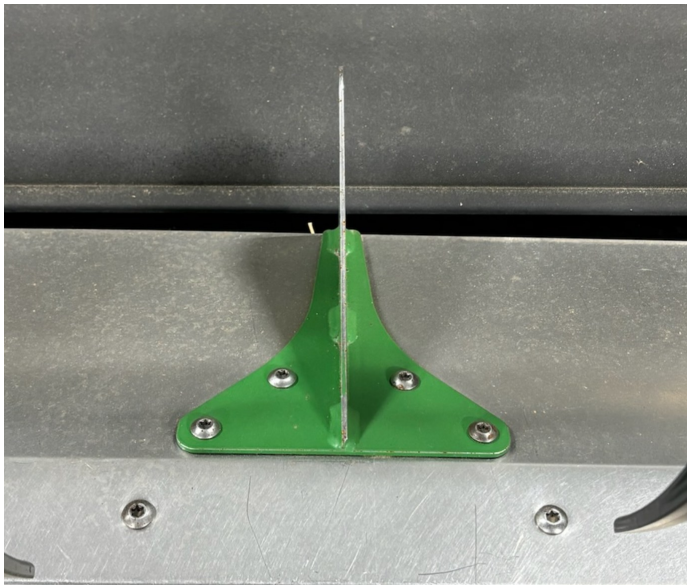

Figure 4

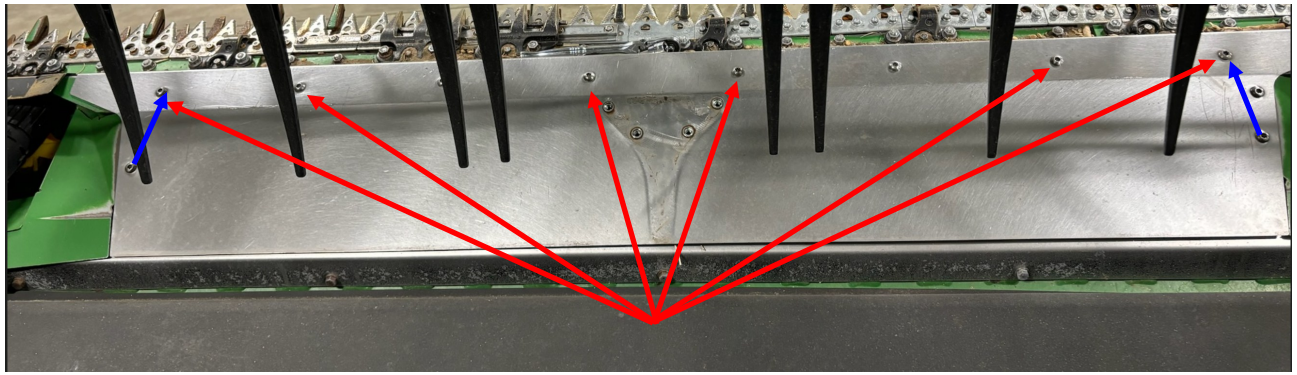

NOTE: If your header does not have the outer Button Head Torx bolts referenced in figure 5 Blue Arrow, remove center located 4 Button Head bolts and Shark fin to install Brush Kit.

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.

Refer to Figure 5

4. Center Brush Mount on bottom pan and install provided metric Button Head Torx Screws (LANFH2CHJ) and flat washers (LAN1133) through slotted holes.
5. Tighten Hardware.

Figure 5

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

John Deere and JD are registered trademarks of Deere & Company.
Lankota is a registered trademark of Lankota Group.