

LANBS62976

Installation Instructions

Lankota Bean Saver Bottom Brush Kit for JD® HD Header

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**




Numerical Parts List

Part Numbers	Description	Qty
LANBS629A	JD HD Bottom Brush Mount	1
LANBS629B	JD HD Bottom Brush Mount with Shark Fin	1
LANBS6FD35	Bean Saver Brush—35"	2
LANBS6FD36	Brush Holder - Top	2
LANBS6FD37	Brush Holder - Backing	2
LANFH2CHJ	M8 x 25mm Button Head Torx Screw	6
LAN1133	Flat Washer	6
LANBSBH	Bag of Hardware	2
LANFXG26	5/16" x 3/4" Carriage Bolt	14
REDKRJ8	5/16" Top Lock Nut	14
LAN1331SFW	Shark Fin	1
RED305K	3/8" x 1 1/4" Carriage Bolt	2
LANFWS53	SAE 3/8" Flat Washer	2
LAN1618000	Nyloc nut—3/8"-16, Gr.5	2

Preparation

1. Lower the reel and move forward as far as possible.
2. Set the header on the ground or a header trailer.
3. Unhook the head from the combine and back it away.

Pictorial Parts List

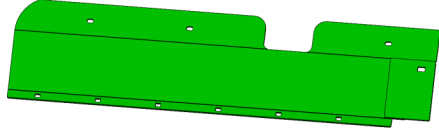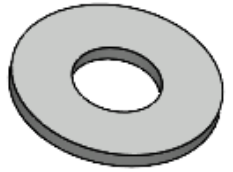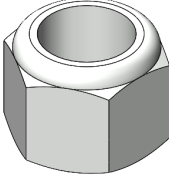 <p>LANBS629A (1)</p>	 <p>LANBS629B (1)</p>	 <p>LANBS6FD35 (2)</p>	 <p>LANBS6FD36 (2)</p>
 <p>LANBS6FD37 (2)</p>	 <p>LANFH2CHJ (6)</p>	 <p>LAN1133 (6)</p>	 <p>LANFXG26 (14)</p>
 <p>REDKRJ8 (14)</p>	 <p>LAN1331SFW (1)</p>	 <p>RED305K (2)</p>	 <p>LANFWS53 (2)</p>
	 <p>LAN1618000 (2)</p>		

Kit Installation

Refer to Figures 1—4

1. Take 5/16" carriage bolts and top lock nuts (LANFXG26 & REDKRJ8) and bolt brush (LANBS6FD35) and holders (LANBS6FD36 & LANBS6FD37) to JD HD Bottom Brush Mounts.
2. Remove factory shark fin & 6 Button head Torx bolts referenced in Figure 4 & 5.
3. Install Shark Fin (LAN1331SFW) using 3/8" x 1 1/4" carriage bolt (RED305K), SAE 3/8" flat washer (LANFWS53) & 3/8" nyloc nut (LAN1618000).

Figure 1

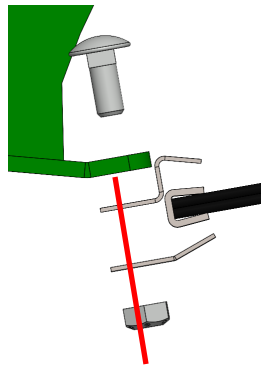


Figure 2

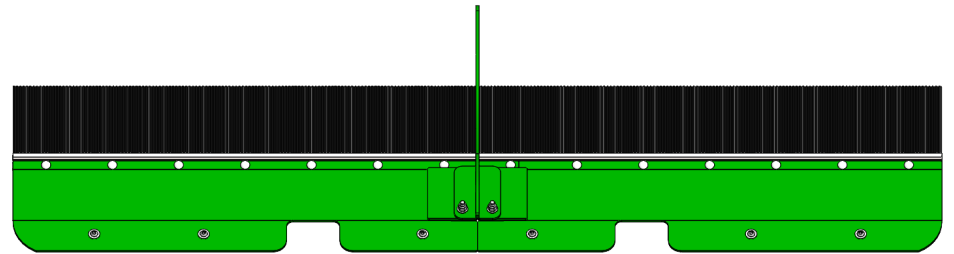


Figure 3


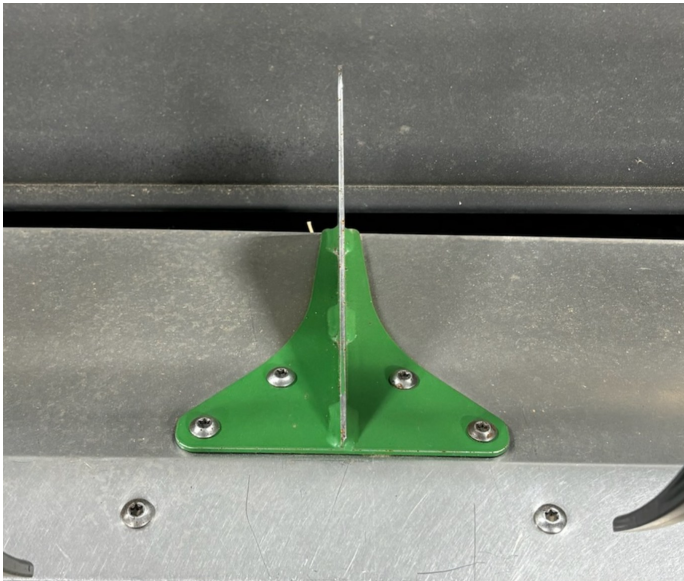


Figure 4

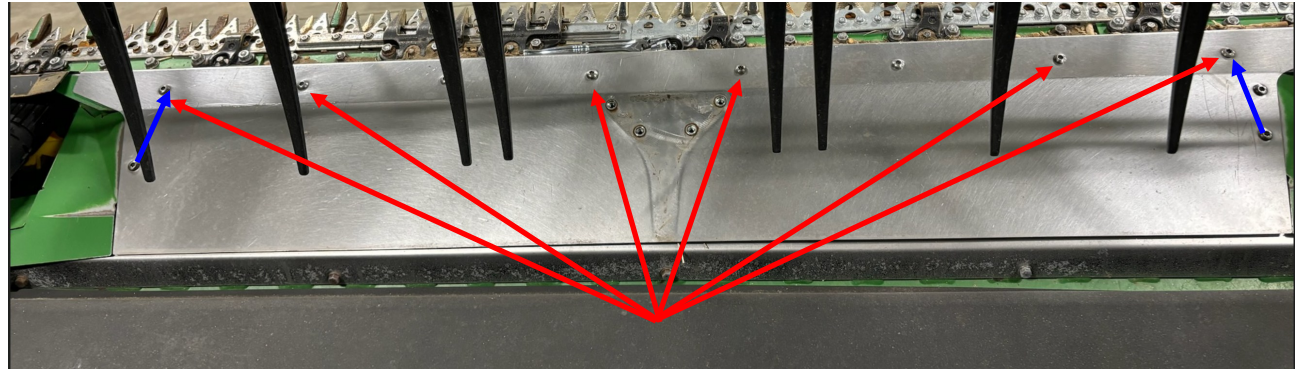


NOTE: If your header does not have the outer Button Head Torx bolts referenced in figure 5 **Blue Arrow**, remove center located 4 Button Head bolts and Shark fin to install Brush Kit.

Kit Installation

Refer to Figure 5

4. Center Brush Mount on bottom pan and install provided metric Button Head Torx Screws (LANFH2CHJ) and flat washers (LAN1133) through slotted holes.
5. Tighten Hardware.

Figure 5

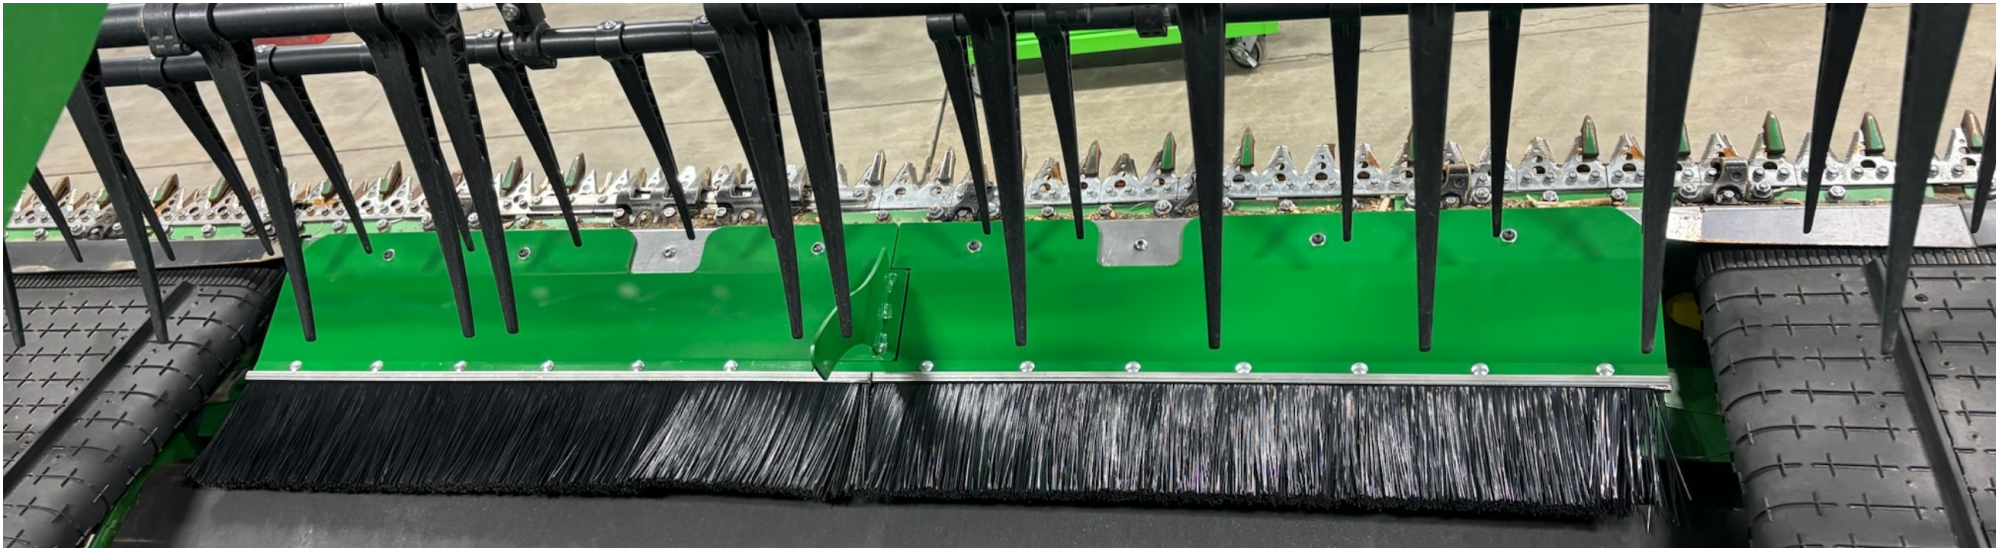



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682