

LANBSJDC7

Installation Instructions

Lankota Upper Feeder House Brush Kit for JD® 70 Series & S Series Combines

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANBS6FD52	Brush	1
LANBS6FD02-03	Brush Holder - (Long) Bottom	1
LANBS6FD02-04	Brush Holder - (Long) Top	1
LANBSJDC701	Feeder house Brush Mount	1
LANBSBH	Bag of Hardware	1
LANFXG26	5/16-18 x 3/4" Carriage Bolt	7
REDKRJ8	5/16-18 Top Lock Nut	7

Preparation

1. Remove head from combine if one is attached.
2. Raise the feeder house and lower the safety stop on the feeder house cylinder.
3. Set the parking brake on the combine.
4. Turn off the combine engine and remove the key.

Pictorial Parts List

 <p>LANBS6FD52 (1)</p>	 <p>LANBS6FD02-03 (1)</p>	 <p>LANBS6FD02-04 (1)</p>
 <p>LANSBJDC701 (1)</p>	 <p>LANFXG26 (7)</p>	 <p>REDKRJ8 (7)</p>

Kit Installation

Refer to Figure 1

1. Take the brush holders (LANBS6FD02-03 & LANBS6FD02-04), cut each along the middle etch lines. The resulting lengths should be 48" long (centered from side to side).

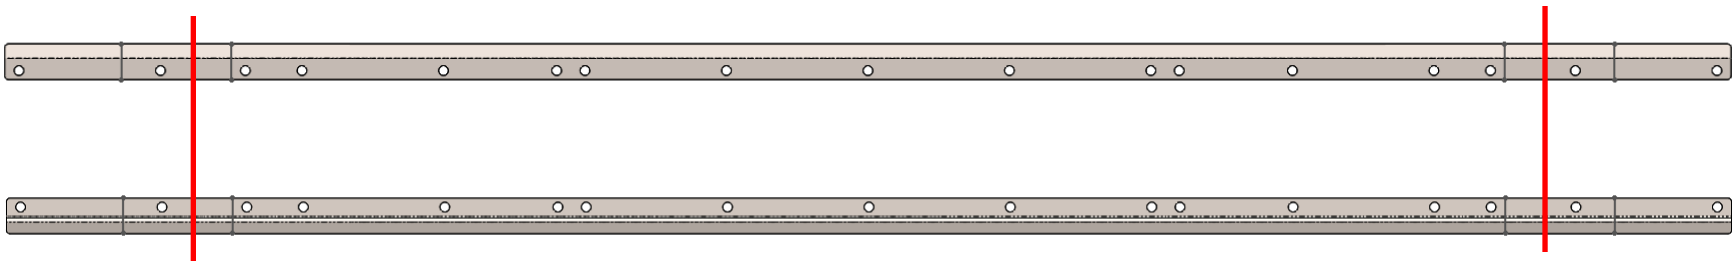


Figure 1

Kit Installation

Refer to Figures 2 - 4

2. Install the brushes on bracket LANBSJDC7 as shown below; use the provided 5/16" carriage bolts and top lock nuts found in the LANBSBH bags and tighten.

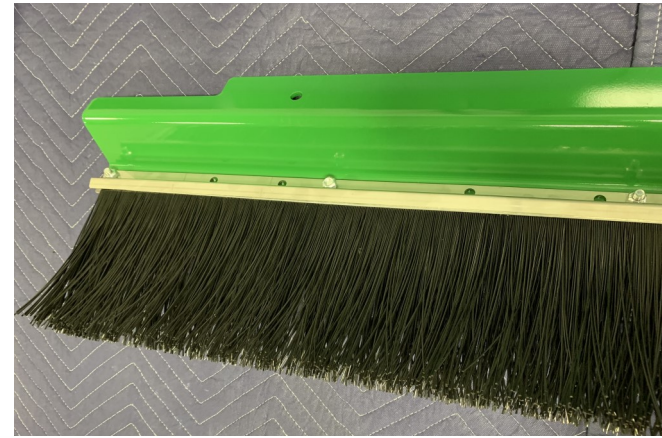


Figure 2



Figure 3

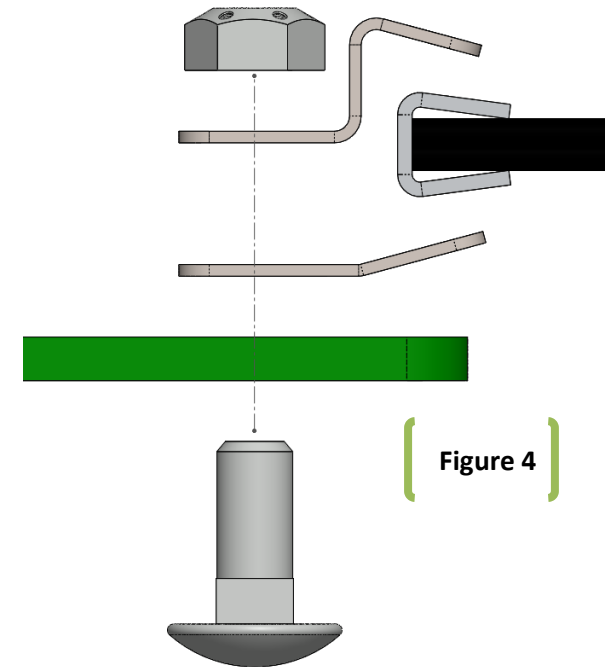


Figure 4

Kit Installation

Refer to Figures 5 & 7

3. Remove the top three bolts holding the upper feeder house plastic.
4. Loosen, but do not remove, the other four upper bolts (2 on each side).

Figure 5



Figure 6



Kit Installation

Refer to Figure 8-10

4. Position the previously assembled brush/bracket into the top of the feeder house opening.
5. Slide the brush up until the holes in the bracket line up with the threaded holes in the feeder house.
6. Replace the three bolts for the upper feeder house plastic.
7. Tighten all hardware.



Figure 8



Figure 9



Figure 10



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682