

LANFR230

Installation Instructions

Lankota Foot Rest for John Deere Sprayers and Tractors with CommandView Cabs

****CABS NEED RELATIVELY EASY ACCESS TO THE BOTTOM OF THE FLOOR AT THE FRONT****

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANFR230W	JD Sprayer & Tractor Foot Rest	2
LAN18A	3/8" x 1" Carriage Bolt	4
LAN18000	3/8" Flat Washer	4
REDWL53	3/8" Lock Washer	4
REDNAF3	3/8" Hex Nut	4
LANFG378	2" Anti-Skid Tape (9" Long)	2

Pictorial Parts List

					
LANFRJD230 (2)	LAN18A (4)	LAN18000 (4)	REDWL53 (4)	REDNAF3 (4)	LANFG378 (2)

Kit Installation



Figure 1

Refer to Figures 1—4

1. Pull back the floor mat from the front window on in the cab.
2. Determine where the footrest should be located.
3. Mark the floor through the bolt holes.
4. Set the foot rest aside and center punch the marks.
5. Drill the center marks with a 13/32" drill bit.
6. Bolt the foot rest in place with 3/8" carriage bolts, flat washers, lock washers and hex nuts.

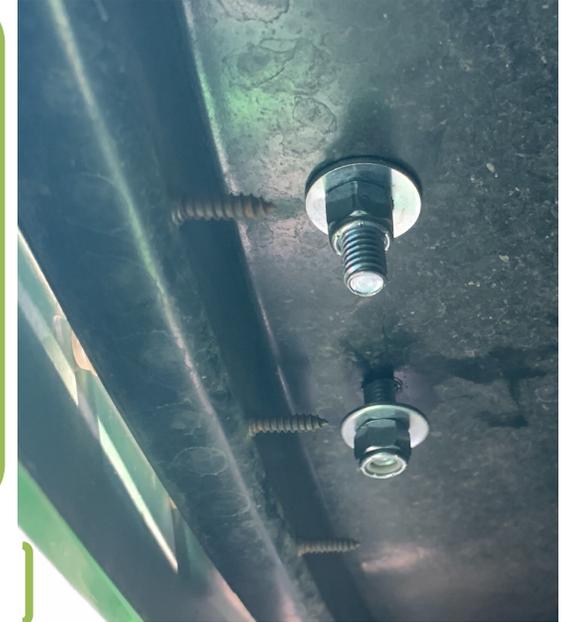


Figure 4



Figure 2

Figure 3



Kit Installation



Figure 5

Refer to 5—7

7. Repeat steps 1-6 on the other side of cab.
8. Push the floor mat back down in place. Press around the foot rests as much as possible.
9. Use a utility knife to make a slit in the mat around the foot rest.
10. Apply the anti-skid tape strips to the tubes.



Figure 6



Figure 7