

LANJDFR120

Installation Instructions


Lankota Foot Rest for John Deere® STS Combines, Forage Harvesters, Windrowers & Cotton Pickers

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Parts

Part Number	Description	Qty
LANJDFR120	Foot Rest Weldment	1
LANJDFR121	Spacer Plate	1
REDB102	1/4" x 1/2" Hex Bolt	2

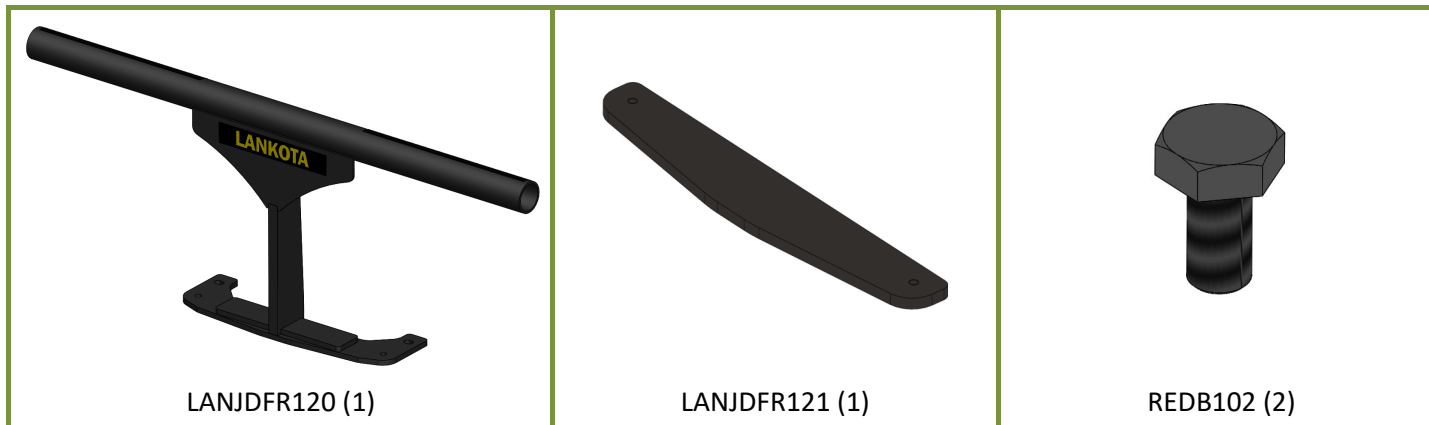


Preparation

It is necessary to install the spacer plate in some cabs where there is a significant difference in floor height in front of the steering column; in these cases, follow these steps.

1. Line the spacer plate (LANJDFR121) up with the holes of the footrest (as shown).

Note: the straight side of the spacer faces in the direction of the shown arrow.

2. Screw in the (2) bolts (REDB102) and tighten.

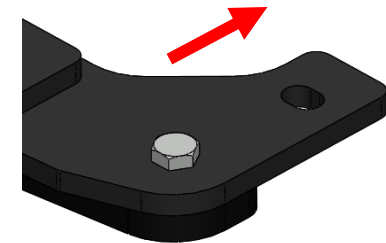

Installation

1. Turn off the combine engine and remove the key.

Refer to Figures 1 & 2

2. Clean the floor of combine cab, mainly around and behind the steering column and foot pedals.
3. Pull the floor mat flaps back as shown.

****Determine if the spacer is needed or not—see previous page.**

Figure 1



Figure 2



Refer to Figures 3, 4 & 5

4. Remove the two bolts or nuts that hold down the steering column (as shown). Set them aside for later.
5. Place the foot rest on the metal floor, with the Lankota sticker facing out the windshield and line up the two bolt holes.
6. Reinstall the previously removed hardware.



Figure 4



Figure 3



Figure 5

Refer to Figure 6 & 7

7. Fold the rubber mat flaps back into place.
8. If you wish, you can cut out a section of the mat so it will lie flat around the foot rest.

Figure 6



Figure 7

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682