

LANMFN306309

Installation Instructions

Mud Flaps for 4920, 4930 & 4940 JD Sprayers with Wide Fenders (N306309)


(1 Pair)

LANKOTA[®]

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Parts List

| Part Numbers | Description | Qty |
|-----------------|---------------------------------------|----------|
| LANMF27 | Sprayer Mud Flap Mount | 2 |
| LANMF16 | Mud Flap Clamp Plate | 2 |
| LANMF17 | Sprayer Mud Flap (28x20) | 2 |
| LANMF07 | Anti-Tear Out Plate | 8 |
| LANMFBH1 | 5/16" Mud Flap Bag of Hardware | 3 |
| LANF05SP | 5/16" Stainless Flat Washer | 10 |
| LANFH8NC | 5/16" Stainless Top Lock Nut | 6 |
| LANF06F3 | 5/16" x 1" Stainless Hex Bolt | 6 |
| LANMFBH2 | 3/8" Mud Flap Bag of Hardware | 2 |
| LANF06FQ | 3/8" x 1.5" Stainless Hex Bolt | 4 |
| LANF05SQ | 3/8" Stainless Flat Washer | 8 |
| LANF21DD | 3/8" Stainless Top Lock Nut | 4 |

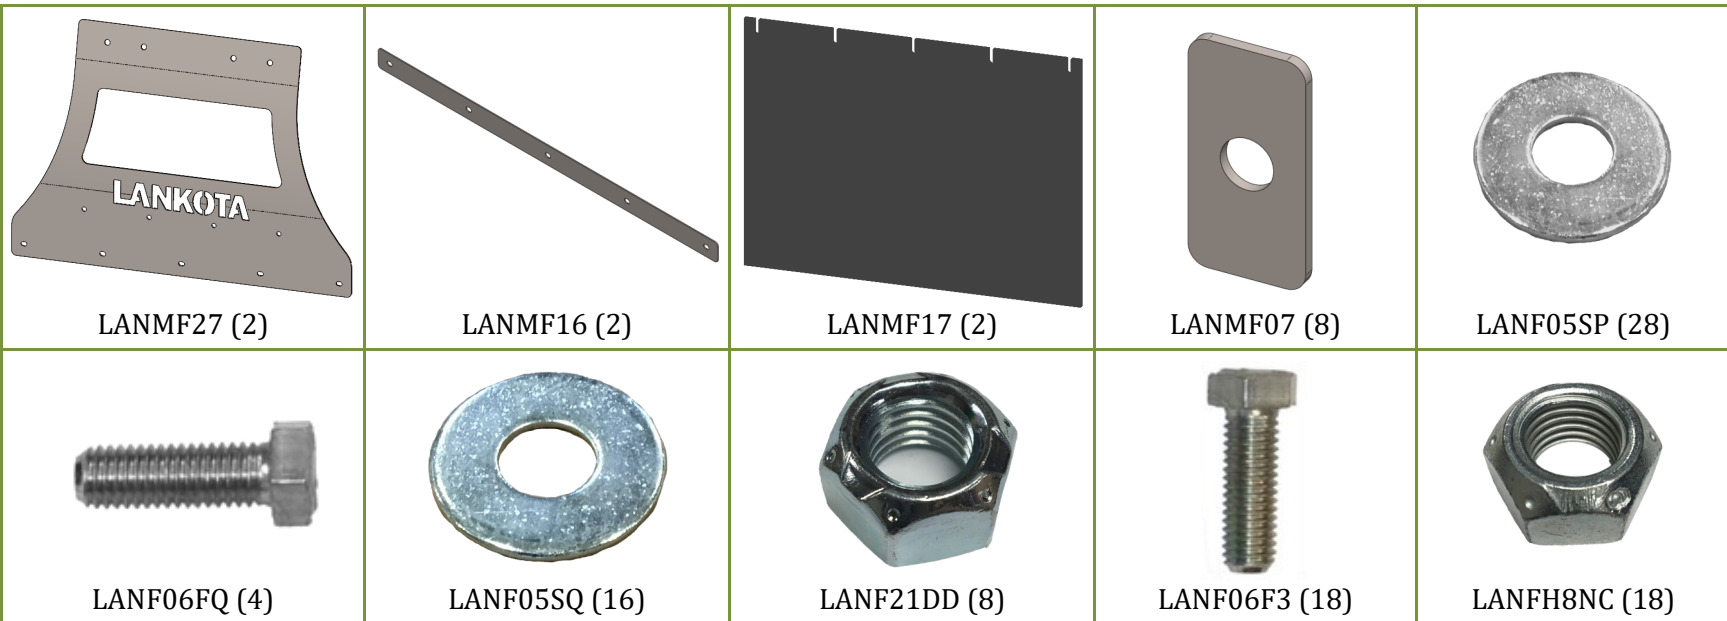

Kit Installation



Figure 1



Figure 2



Figure 3

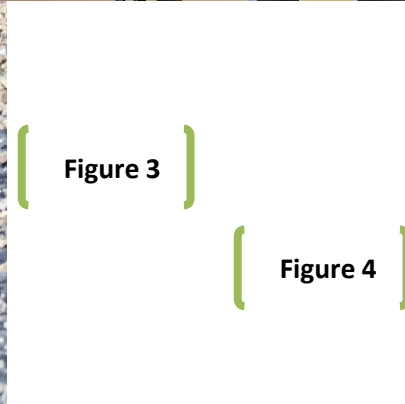


Figure 4

Refer to Figures 1 - 4

1. Remove the hardware and outer plate from the back mount point of the fender.
2. Mount the mud flap mount (LANMF27) through the fender to the fender bracket with the 3/8" hardware.
3. Mount the mud flap (LANMF17) to the mount with the 5/16" hardware and clamp plate (LANMF16).



Kit Installation



Figure 5



Figure 6

Refer to Figures 5 & 6

4. Using a 11/32" drill bit, through the shown holes, drill holes in the fender.
5. Push a 5/16" bolt and washer through the holes.
6. Secure them in place with an anti-tear out plate (LANMF07) and a 5/16" top lock nut.
7. Tighten all hardware.
8. Repeat on other wheel.



WARRANTY STATEMENT

Lankota Warranty only covers products produced by LANKOTA and does not cover parts made and/or sold by other aftermarket manufacturers, or the original manufacturer, or that were part of the original equipment's construction.