

LANSF98066

Installation Instructions

Lankota Shark Fin for MacDon and Case IH Flex Draper 245 & 250 Plus Heads

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**


Numerical Parts List

Part Numbers	Description	Qty
LANSF980A	Shark Fin Case IH Mac Don FD Plus Header	1
LANFG36R	Flange Bolt, M12-1.75 x 30, Gr. 8.8	2

Preparation

1. Attach desired header to the combine. Lock the head to the combine.
2. Raise the head off the ground and lower the safety stop on the feeder house cylinder.
3. Raise the reel all the way up.
4. Set the parking brake on the combine.
5. Turn off the combine engine and remove the key.

Pictorial Parts List

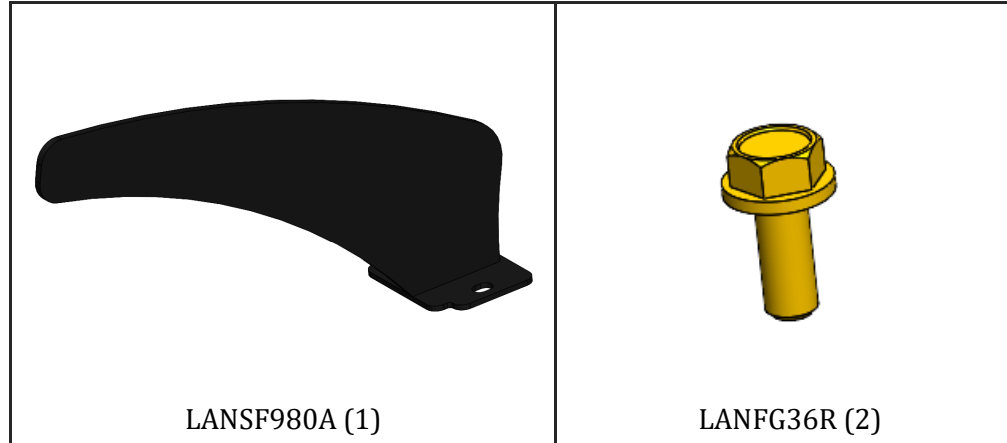

**For further technical assistance,
Call Lankota Inc. at:
1-866-526-5682**

Kit Installation

Refer to Figure 1

1. Clean the center of the head between the center canvas and the sickle bar. Expose the two centered bolts and remove.

Figure 1



Kit Installation

Refer to Figure 2

2. Install the shark fin (LANSF980A) and fasten down with the provided M12 bolts (LANFG36R).
3. Ensure Shark Fin (LANSF980A) is centered and tighten hardware.

Figure 2

