

LANSPUQH

Installation Instructions

Lankota Single Point Mount

For most 3-Point Quick Hitches

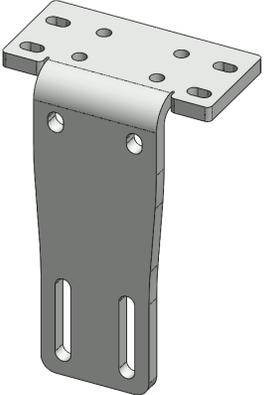
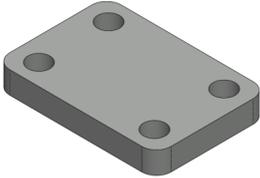
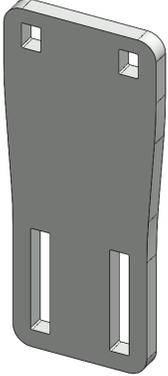
LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

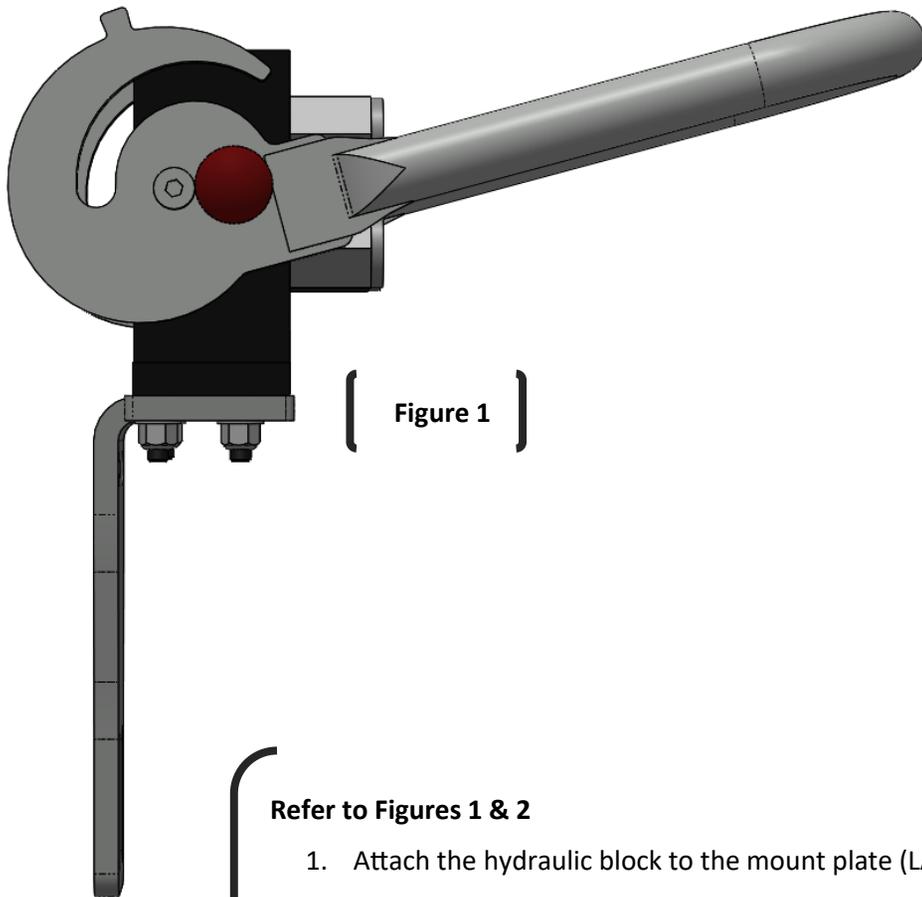
Numerical Parts List

Part Numbers	Description	Qty
LANSPUQH50	Quick Hitch Single Point Mount Plate	1
LANSPUQH60	Quick Hitch Single Point Clamp Plate	1
LANSPO02	Single Point 6-Port Block Spacer	2
LANSPUQHBH	Single Point Block Mounting Hardware	1
LANFJ9F2	M8 x 45mm Flanged Hex Bolt	4
LANFE01V	M8 x 30mm Socket Head Screw	4
LANFQ65N	M8 Flanged Nyloc	4
LANF2CRC	3/8" x 8" Carriage Bolt	4
LAN18000	3/8" Flat Washer	4
REDWL53	3/8" Lock Washer	4
REDNAF3	3/8" Hex Nut	4

Pictorial Parts List

 <p>LANSPUQH50 (1)</p>	 <p>LANSPO02 (2)</p>	 <p>LANFE01V (4)</p>	 <p>LANFQ65N (4)</p>	 <p>LANFJ9F2 (4)</p>
 <p>LANSPUQH60 (1)</p>	 <p>LANF2CRC (4)</p>	 <p>LAN18000 (4)</p>	 <p>REDWL53 (4)</p>	 <p>REDNAF3 (4)</p>

Kit Installation

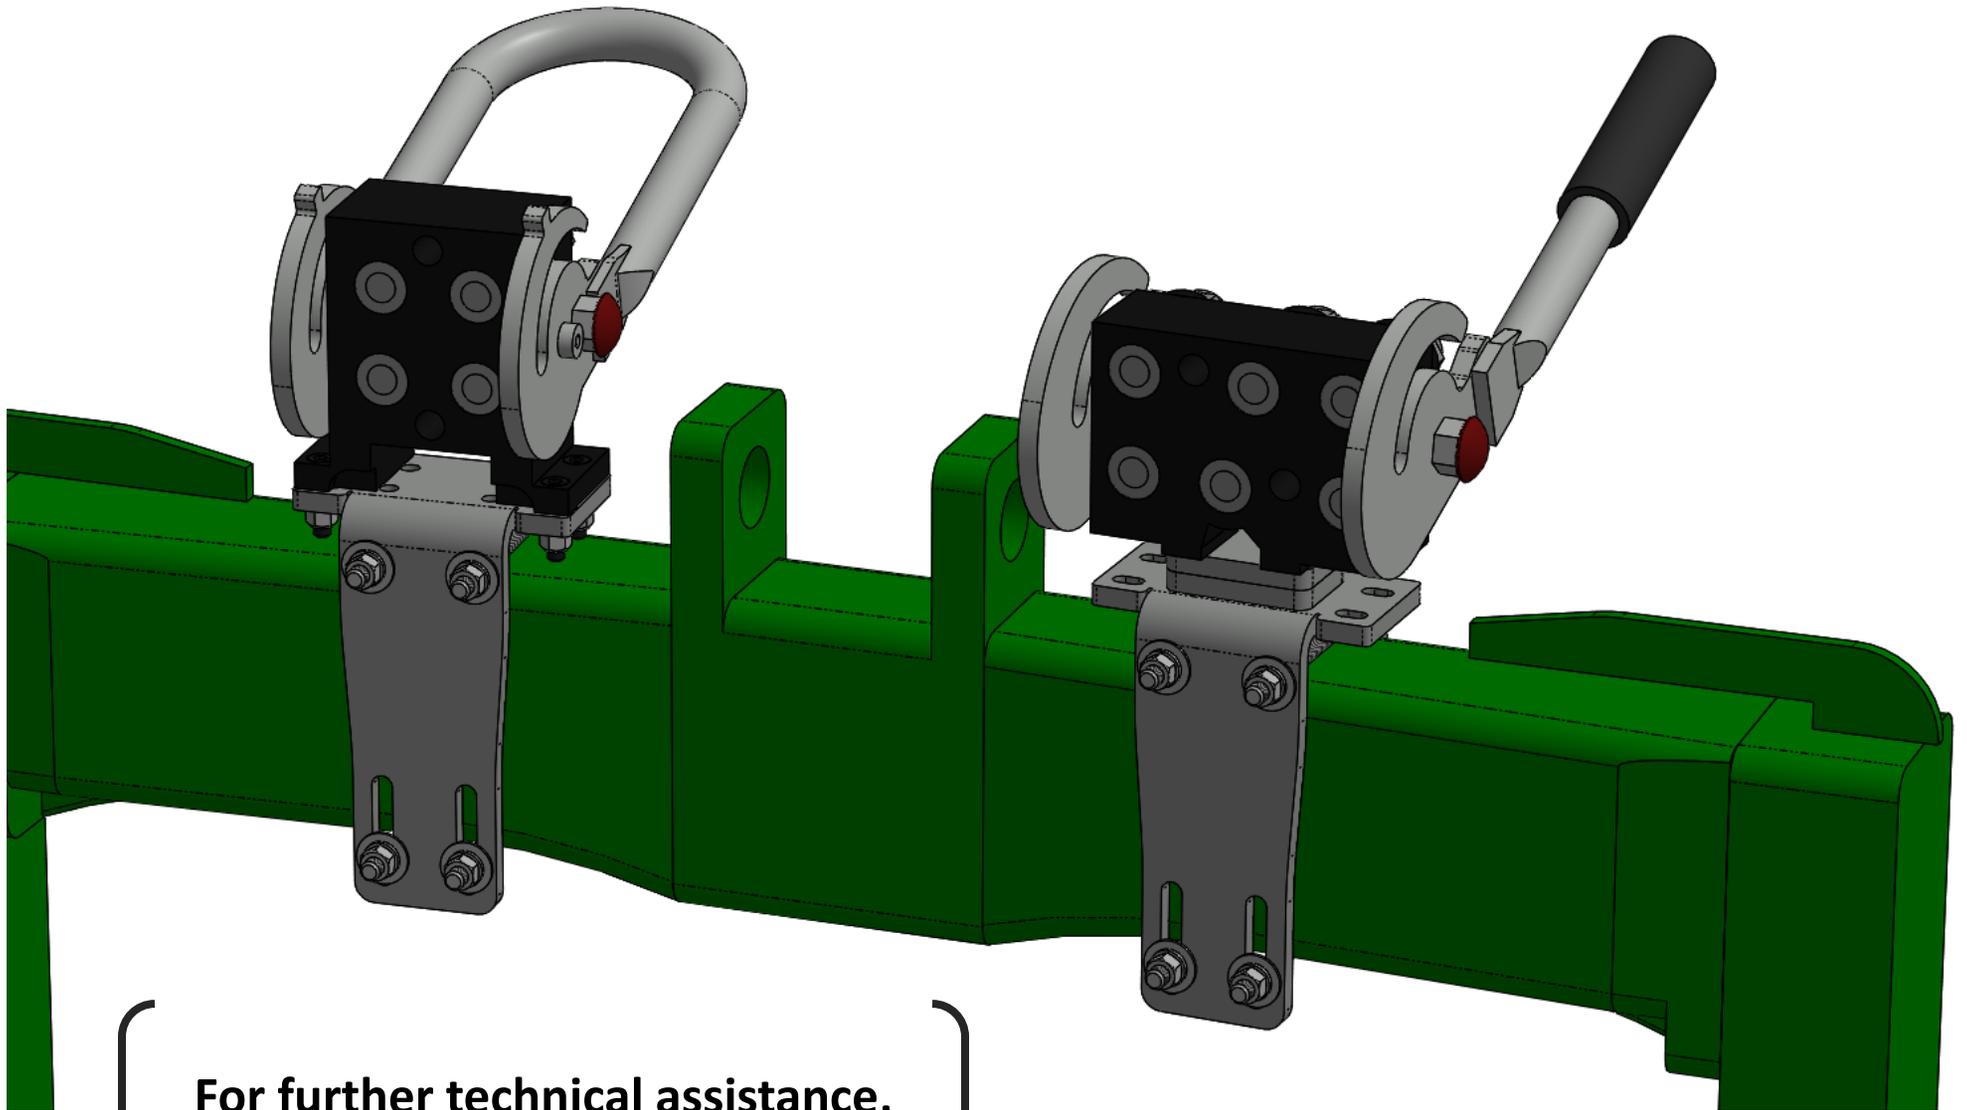


Refer to Figures 1 & 2

1. Attach the hydraulic block to the mount plate (LANSPUQH50) as shown.

Follow the additional instructions provided to install the block(s) and route hoses/fittings correctly.

2. Clamp the mount plate to the quick hitch with the clamp plate (LANSPUQH60). Run the 8" carriage bolts through the plate over and under the quick hitch and through the mount plate. Tighten with the 3/8" flat washers, lock washers and hex nuts.
3. Once they are tight, use a cutting wheel or hack saw to remove excess carriage bolt length.



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682