

# **LANSS840/90R8**

## **Installation Instructions**

**Lankota GENERATION II Stalk Stomper® Mounting Kit for JD® 40/90 Series Corn Heads**

**8-Row Coverage**

# **LANKOTA®**

**270 West Park Avenue  
Huron, SD 57350  
866-526-5682**

# Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Qty</b>
LANSSB77GRN	77" Tool Bar	2
LANSS890L1	Left Stalk Stomper Mount for 890 Series	1
LANSS890R1	Right Stalk Stomper Mount for 890 Series	1
LANSS890L2	Left Stalk Stomper Mount for 890 Series	1
LANSS890R2	Right Stalk Stomper Mount for 890 Series	1
LANSS693T	Stalk Stomper Mount	2
LANSS659	Flip-up Stomper Mount	6
<b>LANSS840/90R8BH</b>	<b>Box of Hardware</b>	<b>1</b>
LANSS704	Stalk Stomper Pin Assembly	2
LAN1818A	3/8" x 16 Thread Cutting Bolt	8
LAN600UBOLT	U-Bolt 5/8" x 2.265" ID x 3.75" Length	8
LAN890UBOLT	U-Bolt 5/8" x 3.125" ID x 3.5" Length	8
LAN690830	5/8" Serrated Flange Nut	36
<b>LANSS668BH</b>	<b>Bag of Hardware</b>	<b>6</b>
LAN600UBOLT	U-Bolt 5/8" x 2.265" ID x 3.75" Length	2
LAN690830	5/8" Serrated Flange Nut	4
LANFNHVK	1/2"-13 x 2.5" Flanged Cap Screw	1
LANFNXC1	1/2" Flanged Nyloc Nut	1

# Pictorial Parts List

			
LANSSB77GRN (2)		LANSS693 (2)	
			
LANSS890L1 (1)	LANSS890R1 (1)	LAN690830 (60)	LANSS659 (6)
			
LANSS890L2 (1)	LANSS890R2 (1)	LAN600UBOLT (20)	LAN890UBOLT (8)
			
LANSS704 (2)	LAN1818A (8)	LANFNHVK (6)	LANFNXC1 (6)

## Preparation

1. Attach desired header to the combine. Lock the head to the combine.
2. Raise the head off the ground and lower the safety stop on the feeder house cylinder.

OR

1. Set the desired header on a suitable header trailer.
2. Release the header from the combine and back it away.

## Stalk Stomper Disclaimer

### *Stalk Stomper Disclaimer*

The most effective use of the Lankota Stalk Stomper® is achieved by adjusting the stomper pad so that when the corn head is at its normal cutting height, the pad of the shoe is 1" above the ground. Over compression of the spring can shorten the life of the stomper spring, increase wear on the poly liner, and may result in undue damage NOT covered by Lankota's Limited Warranty.

### Stalk Stomper Height Adjustment

To adjust Lankota Stalk Stomper shoes, watch this video found on YouTube: <https://youtu.be/Ukcq7NrCgpQ>  
and the Lankota website: <https://lankota.com/stalk-stompers.html>  
or scan the QR code to the right with a smart phone.



# Kit Installation

## Refer to Figure 1

1. Starting on left side of the head, install (LANSS890L1) and (LANSS1290L2) mounting brackets. These will be attached to the diagonal brace next to the feederhouse using LAN890UBOLTS and flanged nuts (LAN690830). Finger tighten the U-Bolts so the brackets can be slid to achieve the proper spacing to cover the rows. Repeat on other side.
2. Install tool bar (LANSSB77GRN) bar to the brackets using (LANSS600UBOLTS) and nuts. Once again just finger tighten these nuts so that the bar can be adjusted.
3. Slide mounting brackets to align the tool bars so they are parallel to the back of the head. Make sure to note the location of your row so that the mounts are clear of the brackets in the next step. Tighten all the hardware.

## Refer to Figure 2

4. Mount the flip up mounts (LANSS659) to the tool bar so the mounts are centered in line with every row, except those under the feederhouse.
- Note:** The flip up brackets (LANSS659) can only be installed on top of the tube.
5. Secure mounts with 2 U-bolts (LAN600UBOLT) and 4 nuts (LAN690830) all found in the bags of hardware marked (LANSS668BH). Tighten all attaching hardware at this time.



Figure 1

Figure 2



# Kit Installation

## Refer to Figures 3 & 4

6. Remove nuts and lock washers from bracket on the front of the row units 4 & 5. If header is equipped with hydraulic deck plates, remove the deck plate rod shield as well.
7. Remove rear vertical mounting bolts from gearbox. Discard factory eye bolts, these are no longer required.
8. Install mounting bracket (LANSS693T) utilizing factory rear vertical mounting bolts and two flange lock nuts (LAN690830). Tighten all hardware.

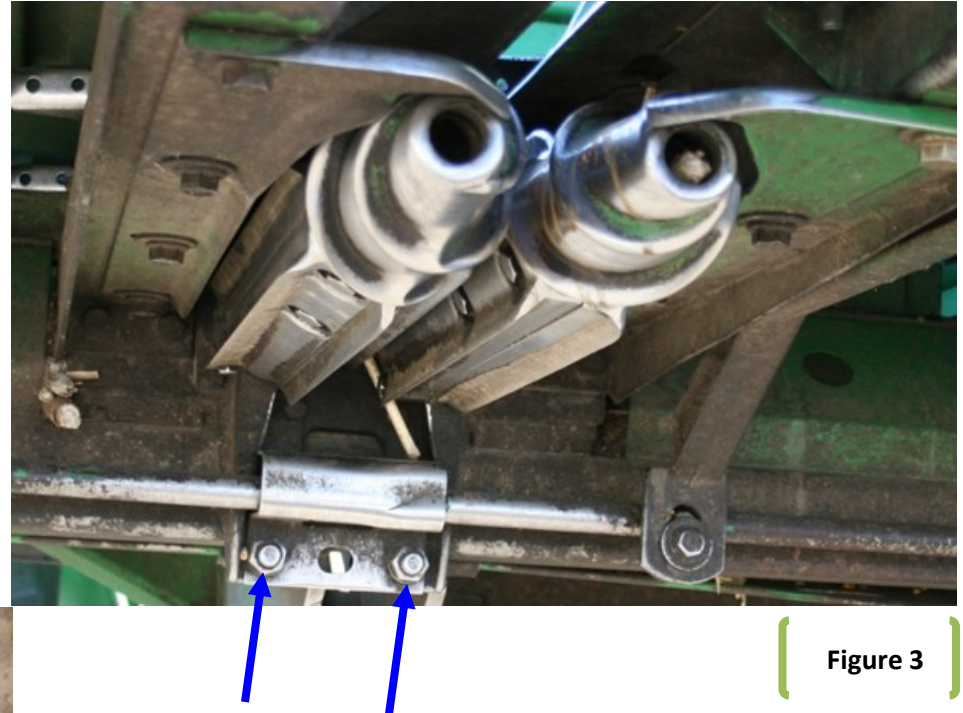


Figure 3



Figure 4

# Kit Installation

## Refer to Figures 5 & 6

9. Slide a Lankota Stalk Stomper® shoe onto each mounting bracket (LANSS693) and secure with a Stalk Stomper Pin Assembly. (LANSS704).
10. Slide the Lankota Stalk Stomper® shoes onto the flip up mounts (LANSS659) and secure to each using 1 bolt (LANFNHVK) and 1 lock nut (LANFNXC1) found in the bags of hardware marked (LANSS668BH). Tighten and secure. Use the flip up option of the flip up mounts to clear tires on trailers.



Figure 5


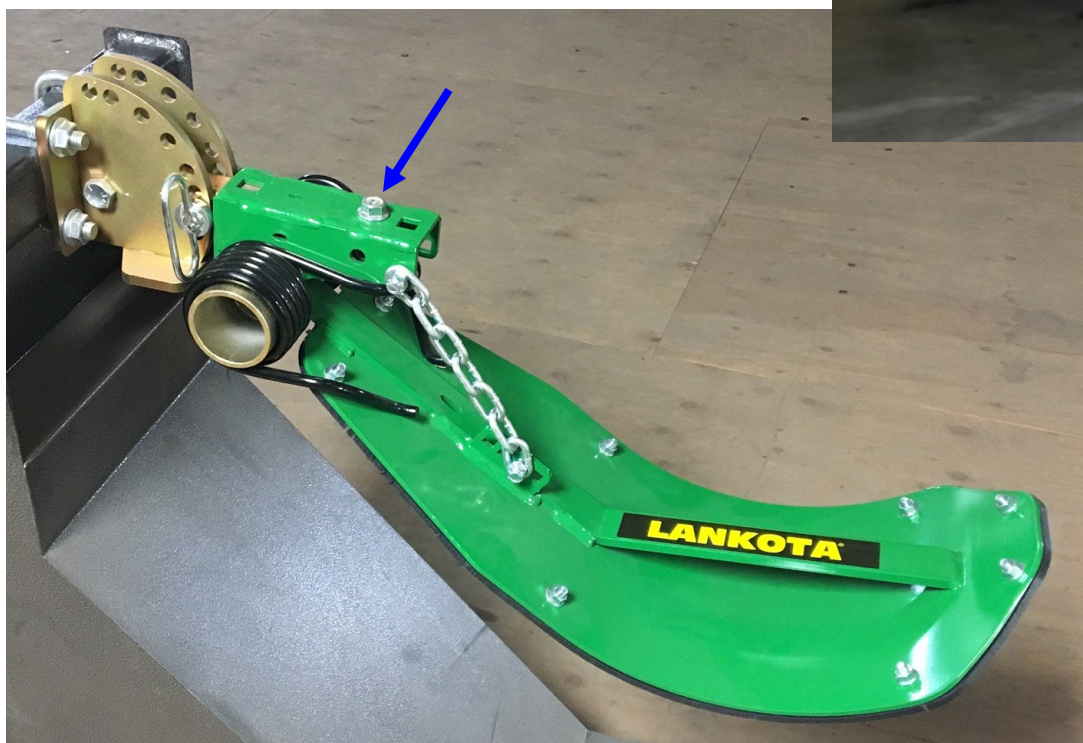


Figure 6

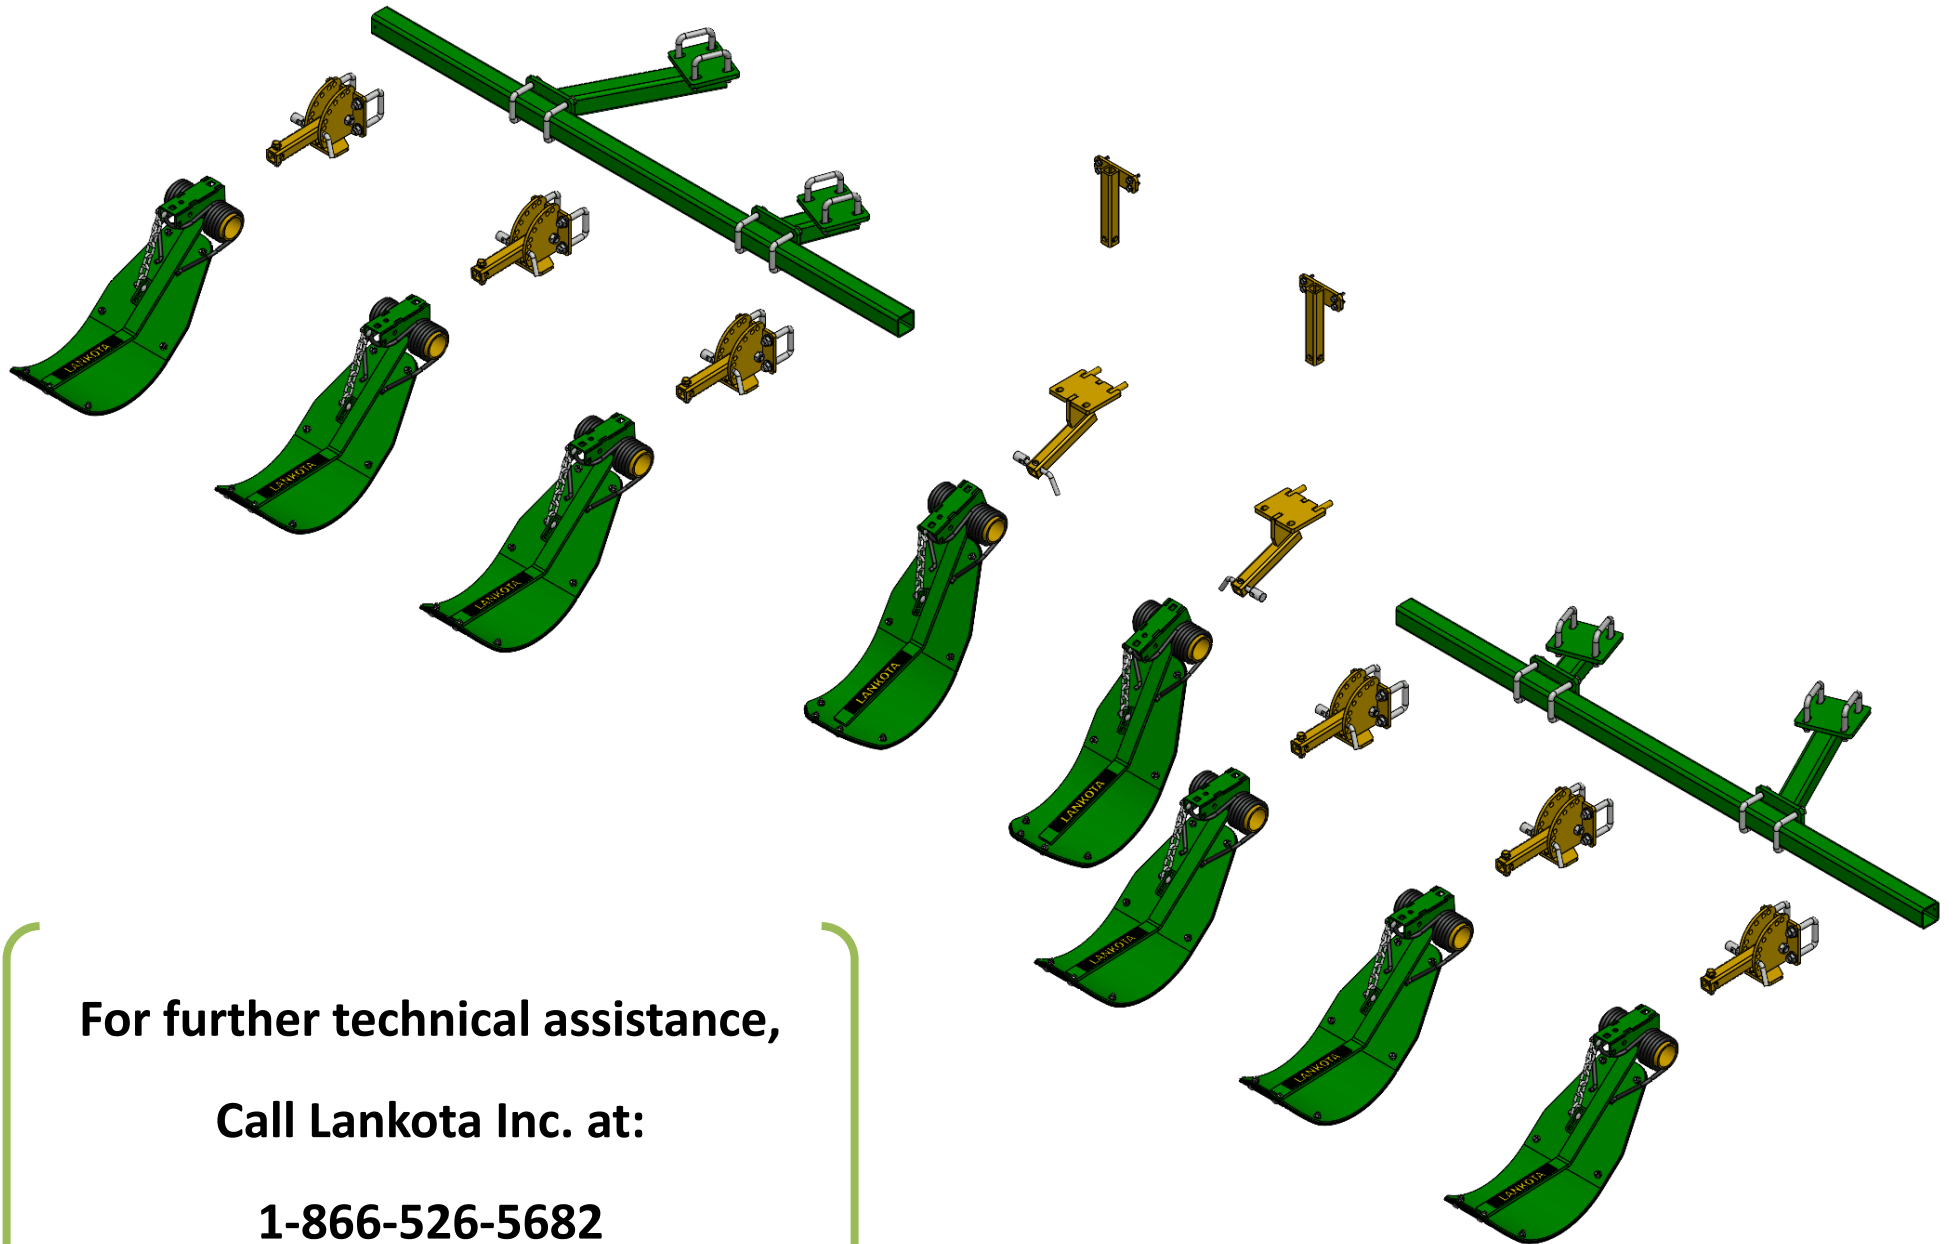

For further technical assistance,  
Call Lankota Inc. at:  
**1-866-526-5682**