

# LANTB21459

## Installation Instructions

Front Weight Mounted Toolbox for CIH Tractors


# LANKOTA®

270 West Park Avenue  
Huron, SD 57350  
866-526-5682

# Numerical Parts List

Part Numbers	Description	Qty
LANTBJD100-ABLK	Toolbox Assembly	1
LANTB033	Toolbox Mount	1
LANTB033M	Toolbox Mount Opposite	1
LANTB034	Toolbox Mounting Hook	2
LANTB035	Rubber Pad	2
LAN506K	1/2" x 1 1/2" Carriage Bolt	8
LAN3722	1/2" Serrated Flange Nut	4
LAN22000	1/2" Washer	4
LAN1137030	1/2" Nyloc Nut	4

# Pictorial Parts List

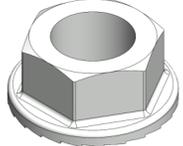				
LANTBJD100-ABLK (1)	LANTB033 (1)	LANTB033M (1)	LANB034 (2)	LANTB035 (2)
				
LAN506K (8)	LAN3722 (4)	LAN22000 (4)	LAN1137030 (4)	

# Kit Installation

## Refer to Figures 1 & 2

1. Check that the bottom/back section of the toolbox mounts (LANTB033 & LANTB033M) are clean and dry.
2. Remove the adhesive protecting paper from the rubber pads (LANTB035).
3. Stick the rubber pads to the bottom/back side of the toolbox mounts as shown in Figure 1 & 2.

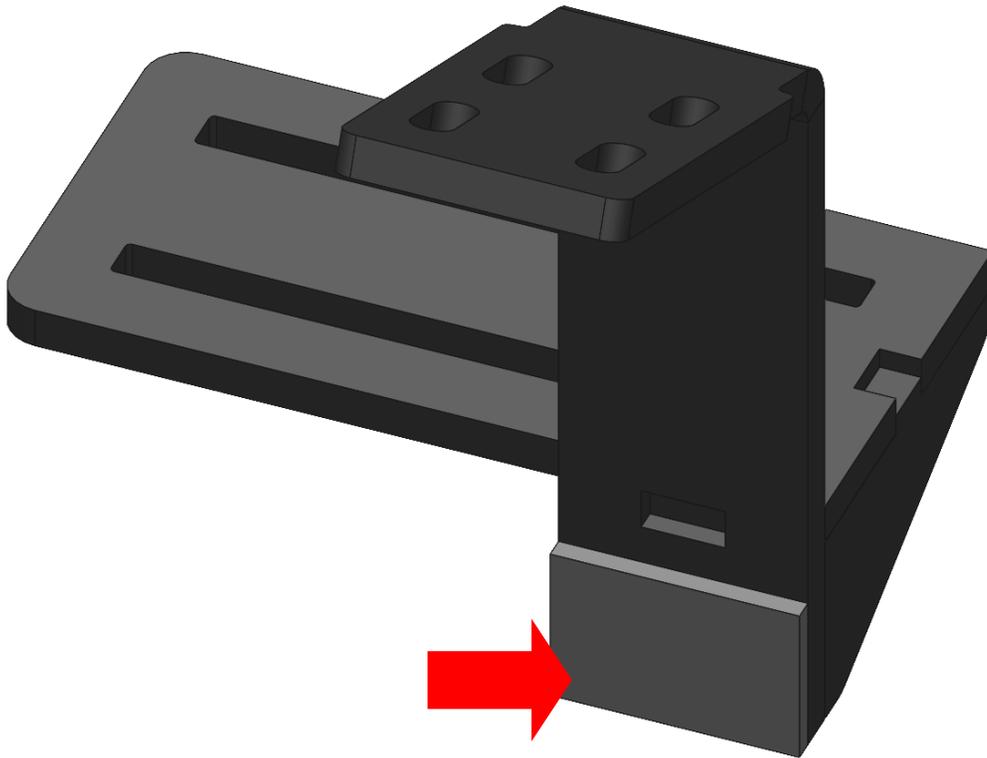


Figure 1

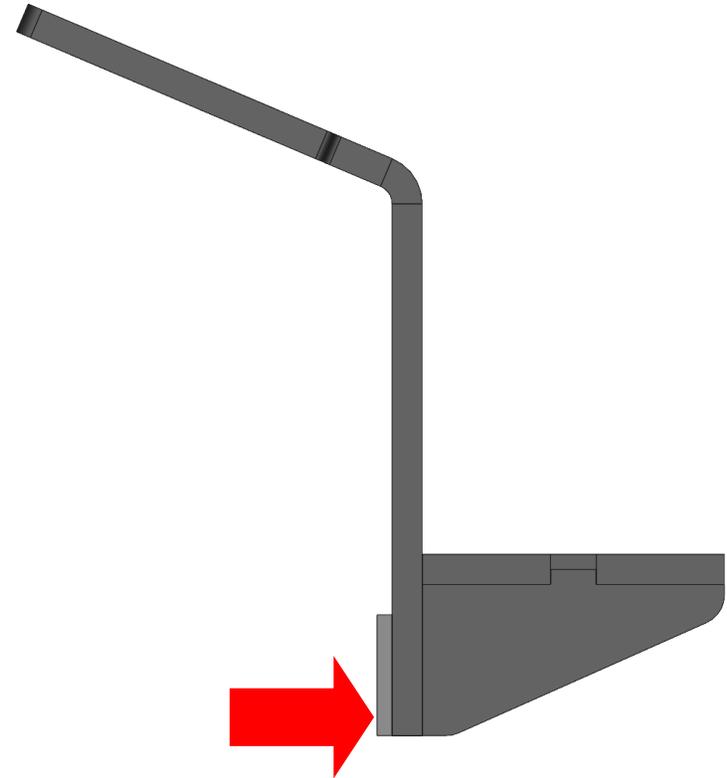


Figure 2

# Kit Installation

## Refer to Figures 3 & 4

4. Remove the weight clamping bolt holding the weights together.
5. Place two 1/2" x 1 1/2" carriage bolts (LAN506K) in each of the toolbox mounting hooks (LANTB034) and place them down between the weight handles, centered across the tractor. **Note: Leave three open weight handle spaces between the two toolbox mounting hooks.**
6. Replace the weight clamping bolt through the toolbox mounting hooks and the weights and tighten.



Figure 3



Figure 4

# Kit Installation

## Refer to Figures 5 & 6

7. Hang the toolbox mount (LANTB033) on the 1/2" carriage bolts. Depending which weights are equipped will determine which mounting slots will be used.
8. Slide the toolbox mount as far up at possible on the toolbox mounting hook (LANTB034) as possible, and tighten two 1/2" serrated flange nuts (LAN3722) on the bolts. The rubber pad on the back of the toolbox mount should be firmly seated against the weights.
9. Repeat Steps 4 & 5 for the opposite toolbox mount (LANTB033M).
10. Place the toolbox (LANTBHD100-ABLK) on the toolbox mounts and bolt it with four 1/2" x 1 1/2" carriage bolts (LAN506K), 1/2" washers (LAN22000), and 1/2" nyloc nuts (LAN1137030).



Figure 5



Figure 6



**For further technical assistance,  
Call Lankota Inc. at:  
1-866-526-5682**