

LANTB21461BLK

Installation Instructions

Lankota Universal Toolbox


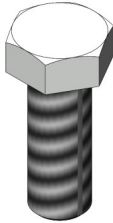

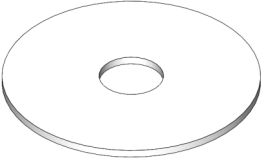

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Numerical Parts List

Part Numbers	Description	Qty
LANTBJD100-ABLK	Toolbox Assembly	1
LAN18A00	3/8" x 1" Hex Bolt	4
LAN18000	3/8" Flat Washer	4
LANF91090A122	3/8" Fender Washer	4
LAN1618000	3/8" Nyloc Nut	4

Pictorial Parts List

				
LANTBJD100-ABLK (1)	LAN18A00 (4)	LAN18000 (4)	LANF91090A122 (4)	LAN1618000 (4)

Kit Installation

Refer to Figures 1 & 2

1. The toolbox assembly can be mounted to any flat surface of a minimum of 22" wide x 6" deep. Clear the surface of debris, plugs, etc. and set the toolbox in the desired location.
2. If there are pre-existing holes to be used, mark the underside of the toolbox from the other side of the mounting surface through the pre-existing holes. If there are not pre-existing holes to be used, mark through holes in the bottom of the toolbox onto the mounting surface.
3. Drill through the marked locations with a 5/16" drill bit.



Figure 1

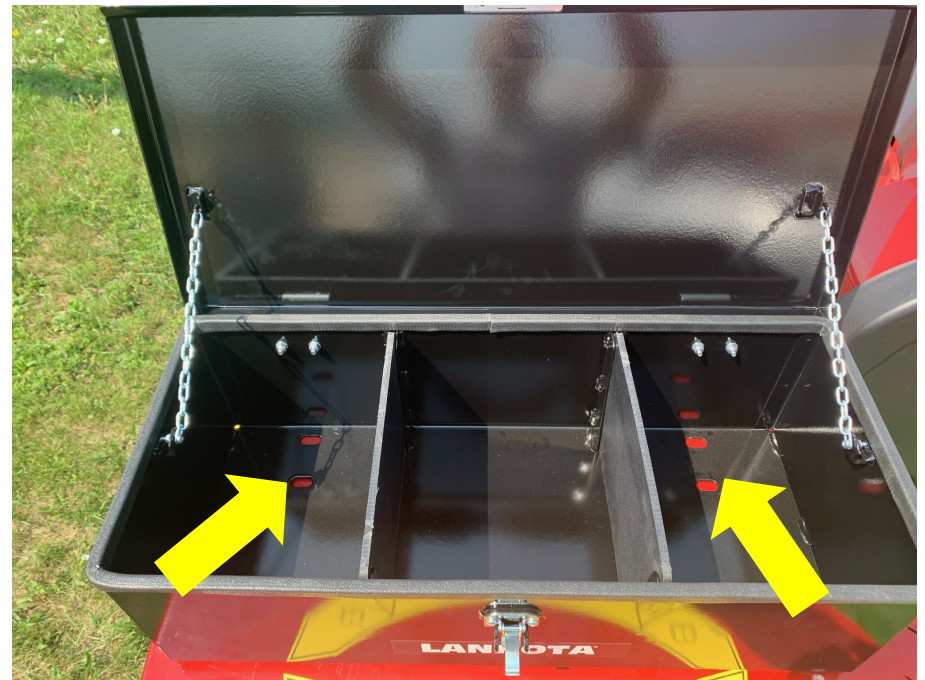


Figure 2

Kit Installation

Refer to Figures 3 & 4

- Using the oversized washers on the back side of the mounting surface, bolt the toolbox to the mounting surface with the 3/8" x 1" hex bolts (LAN18A00), 3/8" fender washers (LANF91090A122), 3/8" flat washers (LAN18000) and 3/8" nyloc nuts (LAN1618000).

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

