

LANTB86915

Installation Instructions

Lankota JD Hinged Draper Header Toolbox

FITS JD HD45F & JD HD50F Headers








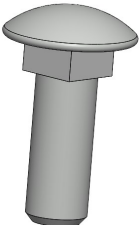





LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

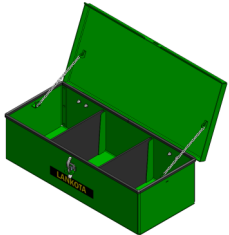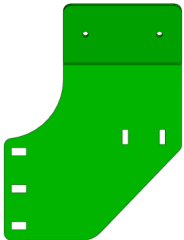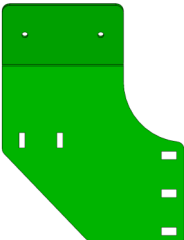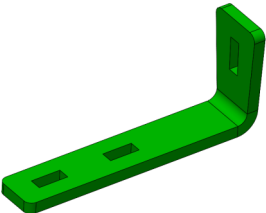Numerical Parts List

Part Numbers	Description	Qty
LANTBJD100-A	Toolbox Assembly	1
LANTB869A	JD HD Toolbox Mount RH	1
LANTB869B	JD HD Toolbox Mount LH	1
LANTB869C	JD HD Toolbox Support Bracket	2
LANTBH003-CB	Toolbox Mount Connecting Bracket	1
RED305K	3/8" x 1.25" Carriage Bolt	2
LAN18A32	3/8" x 1.5" Carriage Bolt	4
LAN506K	1/2" x 1.5" Carriage Bolt	4
LAN22000	1/2" Flat Washer	4
LAN1137030	1/2" Nyloc Nut	4
LANFB305	HHCS 3/8" x 1.25" Gr.5 Bolt	4
LAN1618000	3/8" Nyloc Nut	10
LAN18000	3/8" Flat Washer	14

Pictorial Parts List

				
LANTBJD100-A (1)	LANTB869A (1)	LANTB869B (1)	LANTB869C (2)	LANTBH003-CB (1)
				
RED305K (2)	LAN18A32 (4)	LAN506K (4)	LAN22000 (4)	LAN1137030 (4)
				
	LANFB305 (4)	LAN1618000 (10)	LAN18000 (14)	

Kit Installation

Refer to Figures 1 - 3

1. Set JD HD Toolbox Mounts (LANTB869A & LANTB869B) down on a flat surface and separate mounts so that the inside distance between the two measure 17 3/4" apart.
2. Install Toolbox Mount Connecting Bracket (LANTBH003-CB) to JD HD Toolbox Mounts (LANTB869A & LANTB869B) using provided 1/2" x 1.5" Carriage Bolts (LAN506K), 1/2" Flat Washers (LAN22000) and 1/2" Nyloc nuts (LAN1137030). Ensure that inside measurement on JD HD Toolbox Mounts measure 17 3/4", tighten hardware.

Figure 2

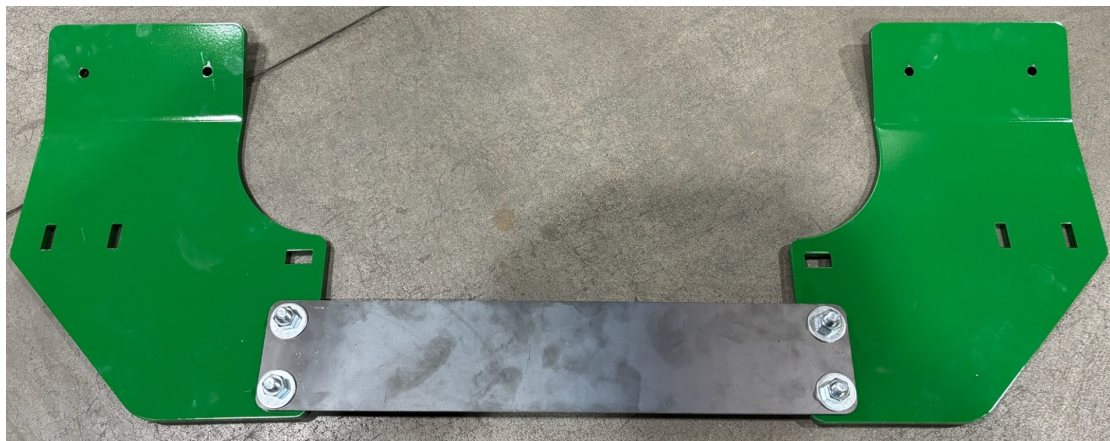


Figure 1



Figure 3



Kit Installation

Refer to Figures 4 - 6

3. Take JD HD Toolbox Support brackets and loosely install onto header using 3/8" x 1.25" carriage bolts (RED305K), 3/8" flat washers (LAN18000), & 3/8" Nyloc nuts (LAN1618000). **NOTE: Bottom hole indicated by arrow.**
4. Once Toolbox Support Brackets are loosely installed, take JD HD Toolbox Mounts with Connecting Bracket and set on top of Support Brackets. Bolt together using 3/8" x 1.5" Carriage bolts (LAN18A32), 3/8" flat washers (LAN18000), & 3/8" Nyloc nuts (LAN1618000).
5. Make sure JD HD Toolbox Mounts (LANTB869A & LANTB869B) are sitting flat on header and spacing between mounts are measuring 17 3/4" apart from one to another. Tighten hardware.

Figure 4



Figure 5

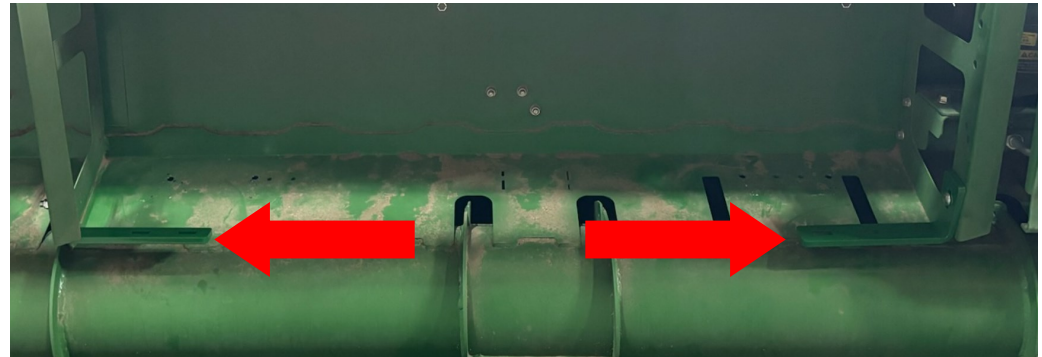


Figure 6



Kit Installation

Refer to Figures 7 - 9

6. After ensuring that mounts are flush with sheet steel on header and spacing is 17 3/4" from one to another, take a drill with a 3/8" drill bit and drill through header sheet steel using holes in JD HD Toolbox Mounts as a guide.
7. Once holes are drilled, take HHCS-3/8" x 1 1/4" Gr. 5 bolts (LANFB305), 3/8" flat washers (LAN18000) & 3/8" Nyloc nuts (LAN1618000) and bolt mounts to header sheet steel.
8. Make sure all hardware are tight to mounts and remove Toolbox Mount Connecting Bracket.

Figure 7



Figure 9


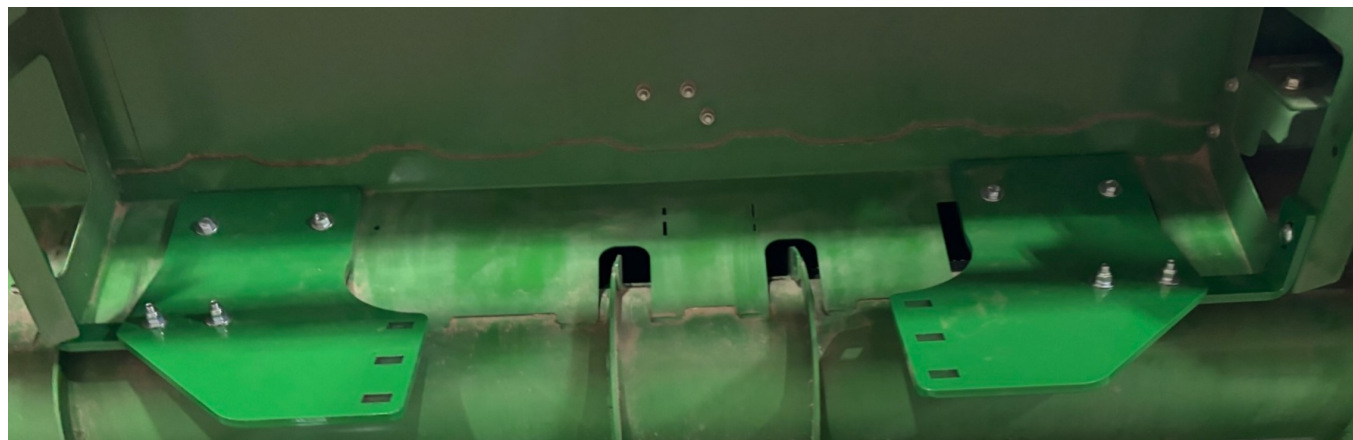


Figure 8

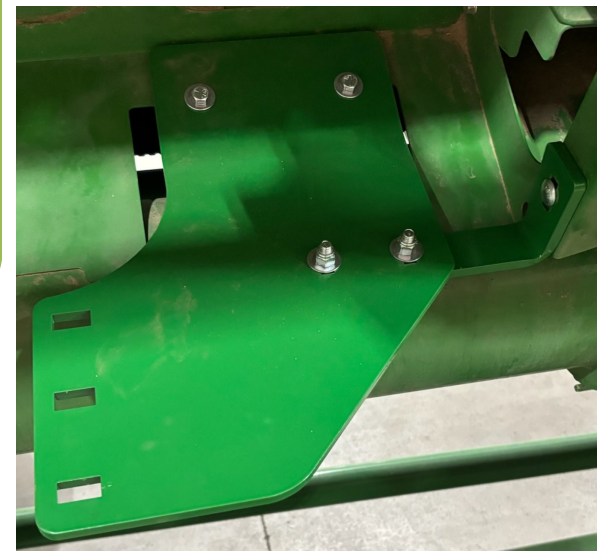

Kit Installation

Refer to Figures 10 - 12

9. Using four 1/2" x 1 1/2" carriage bolts (LAN506K), 1/2" flat washers (LAN22000) and 1/2" nyloc nuts (LAN1137030), bolt the toolbox to the mounting bracket.


Figure 10



Figure 11



Figure 12

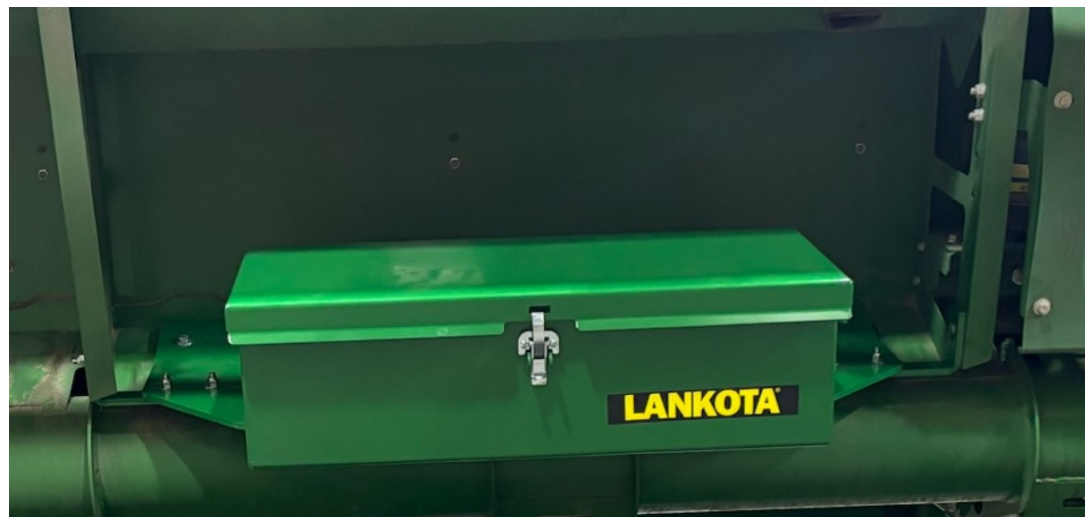

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682